 


SAMSUNG

THREE-CD CHANGER DVD MINI-COMPACT SYSTEM *DVD,VCD,MP3-CD,CD-R/RW PLAYBACK* MAX-DS9550

Instruction Manual

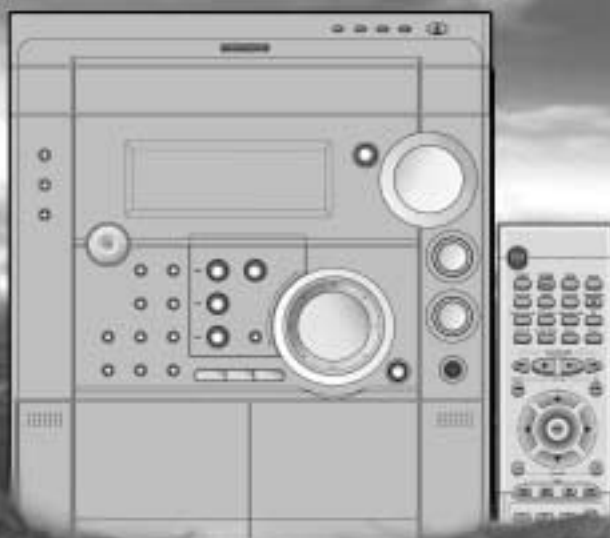

Safety Warnings

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LASER CLASE 1

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTER LOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.



CAUTION

RISK OF ELECTRIC SHOCK.
DO NOT OPEN



CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER, NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates that dangerous voltage constituting of a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the owners manual accompanying this unit.



DVD (Digital Versatile Disc) offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie theater or concert hall.



DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is given on the rear panel of the player.
 (Your DVD player will only play DVDs that are labeled with identical region codes.)

Playable Discs

Disc Type	Mark (Logo)	Recorded Signals	Disc Size	Max. Playing Time
DVD		Audio + Video	12cm	Approx. 240 min. (single-sided) Approx. 480 min. (double-sided)
			8cm	Approx. 80 min. (single-sided) Approx. 160 min. (double-sided)
VIDEO-CD		Audio + Video	12cm	74 min.
			8cm	20 min.
AUDIO-CD		Audio	12cm	74 min.
			8cm	20 min.

Contents

Thank you for buying this
SAMSUNG mini-compact system.

Please take time to read these instructions.
They will allow you to operate your
system with ease and take full advantage
of its features.

GB


◆ SAFETY WARNINGS.....	2
◆ INSTALLING YOUR MINI-COMPACT SYSTEM	
■ Front Panel View	4
■ Remote Control	5
■ Rear Panel View.....	6
■ Where to Install Your Mini-Compact System	7
■ Connecting your System to the Power Supply	7
■ Connecting the Loudspeakers	7
■ Connection of the subwoofer (optional)	8
■ Connection of the TV monitor and VCR (optional)	8
■ Connection for better sound	9
■ Insert Remote Batteries.....	9
■ Connecting the AM (MW) Aerial	10
■ Connecting the FM Aerial	10
■ Connecting the SW Aerial (option)	10
■ Demo/Dimmer function	11
■ NTSC/PAL Selection Method.....	11
■ Setting the Clock	11
◆ CD-PLAYER	
■ Playing a Disc	12
■ Selecting a Disc in the CD changer.....	12
■ DVD Playback	12
■ Forward/Reverse Searching	13
■ Slow Playback/Checking the Remaining Time.....	14
■ Repeat Playback	14
■ Using Disc Menu/Title	15
■ Program Playback	15
■ Selecting the Audio Language/Subtitle Language	16
■ Various DVD Functions	17
■ MP3 Playback	17
■ System Setup	19
■ Setting up the Language Features	21
◆ TUNER	
■ Searching for and Storing the Radio Stations	21
■ Selecting a Stored Station.....	22
■ Improving Radio Reception	22

◆ TAPE DECK	
■ Listening to a Cassette	23
■ CD Synchro Record Feature	23
■ Recording a Compact Disc	23
■ Recording a Radio Programme	24
■ Copying a Cassette (Dubbing)	24
■ Selecting the Cassette Playback Mode (Deck 2 Only)	24
■ Tape Counter.....	24
◆ OTHER FUNCTIONS	
■ Timer Function.....	25
■ Cancelling the Timer	25
■ 3D.Sound Function	26
■ Mute Function	26
■ Selecting a Sound Mode	26
■ Power Surround Function	26
■ Setting the System to Switch off Automatically	27
■ S.Bass Level function	27
■ Connecting Headphones	27
■ Microphone Function (option)	27
■ Connecting to an External Source.....	28
◆ RECOMMENDATIONS FOR USE	
■ Safety Precautions	28
■ Cleaning Your Mini-Compact System	29
■ Precautions When Using Compact Discs	29
■ Precautions When Using Audio Cassettes	29
■ Before Contacting the After-Sales Service	29
■ Technical Specifications	30
■ Reference	31

Symbols




 Front Panel View


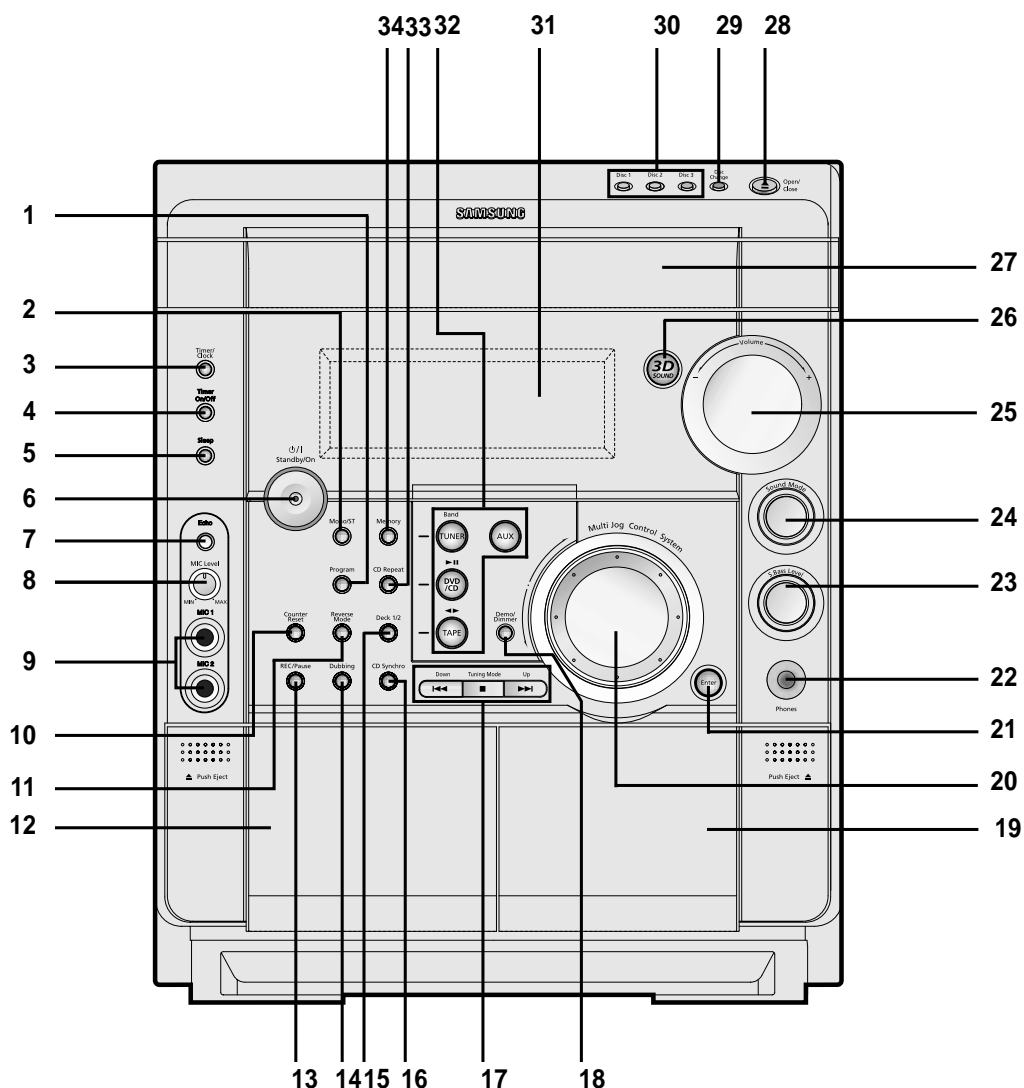


- | | |
|---|--------------------------------|
| 1. Program | 18. Demo/Dimmer |
| 2. FM Mono/Stereo | 19. Cassette Deck 2 |
| 3. Timer/Clock | 20. Multi Jog |
| 4. Timer On/Off | 21. Enter |
| 5. Sleep | 22. Headphone Jack Connector |
| 6. Standby/On | 23. S.Bass Level |
| 7. Echo | 24. Sound Mode |
| 8. MIC Level (option) | 25. Volume |
| 9. MIC1, MIC2 (option) | 26. 3D.SOUND |
| 10. Counter Reset | 27. Compact Disc Compartment |
| 11. Reverse Mode | 28. Open/Close |
| 12. Cassette Deck 1 | 29. Disc Change |
| 13. Record/Pause/PAL/NTSC | 30. Disc Selection buttons |
| 14. TAPE Normal Speed Dubbing | 31. Window Display |
| 15. Deck 1/2 | 32. Function Selection buttons |
| 16. CD Synchro Recording | 33. CD Repeat |
| 17. Search Function buttons
Tuning Mode or Stop button | 34. Memory |

 
Remote Control

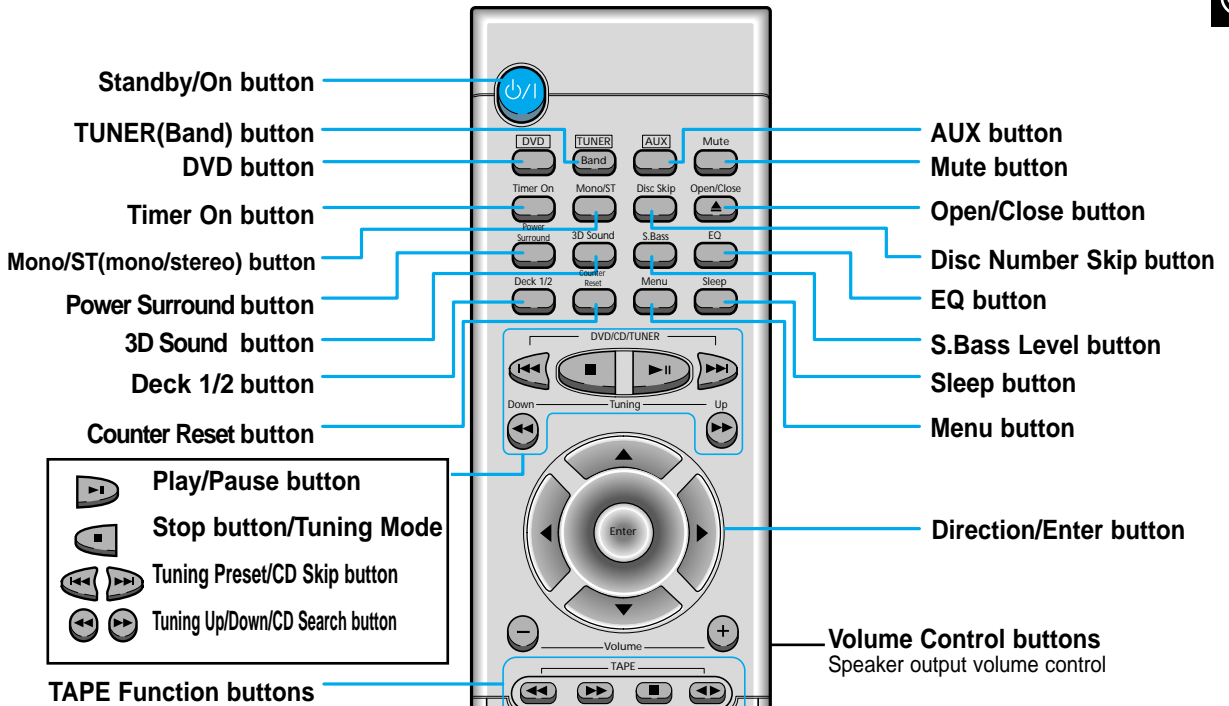

  To open the cover of the remote control, push the top of the cover, then slide downward.

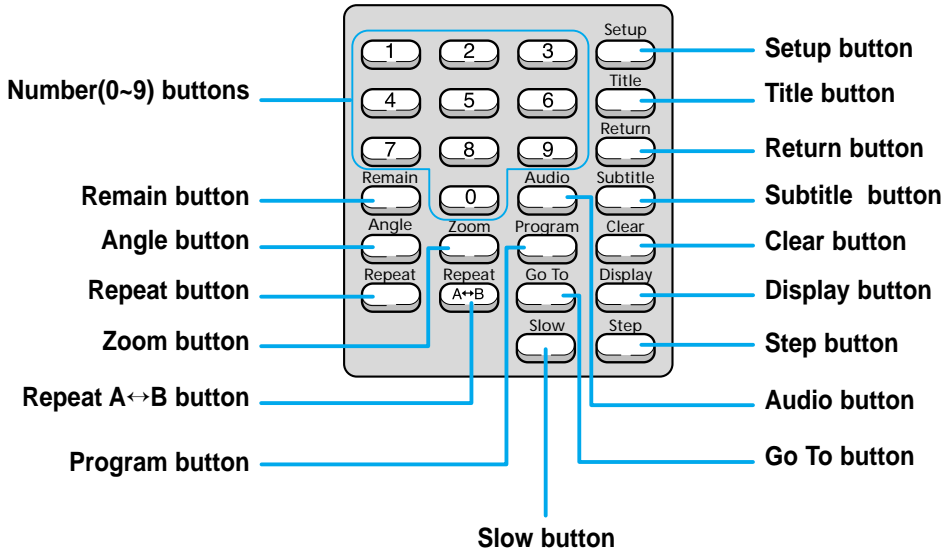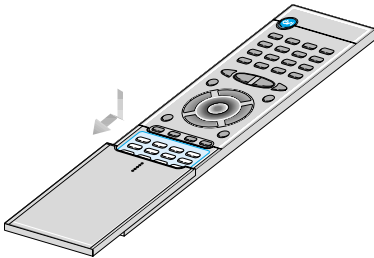

Rear Panel View

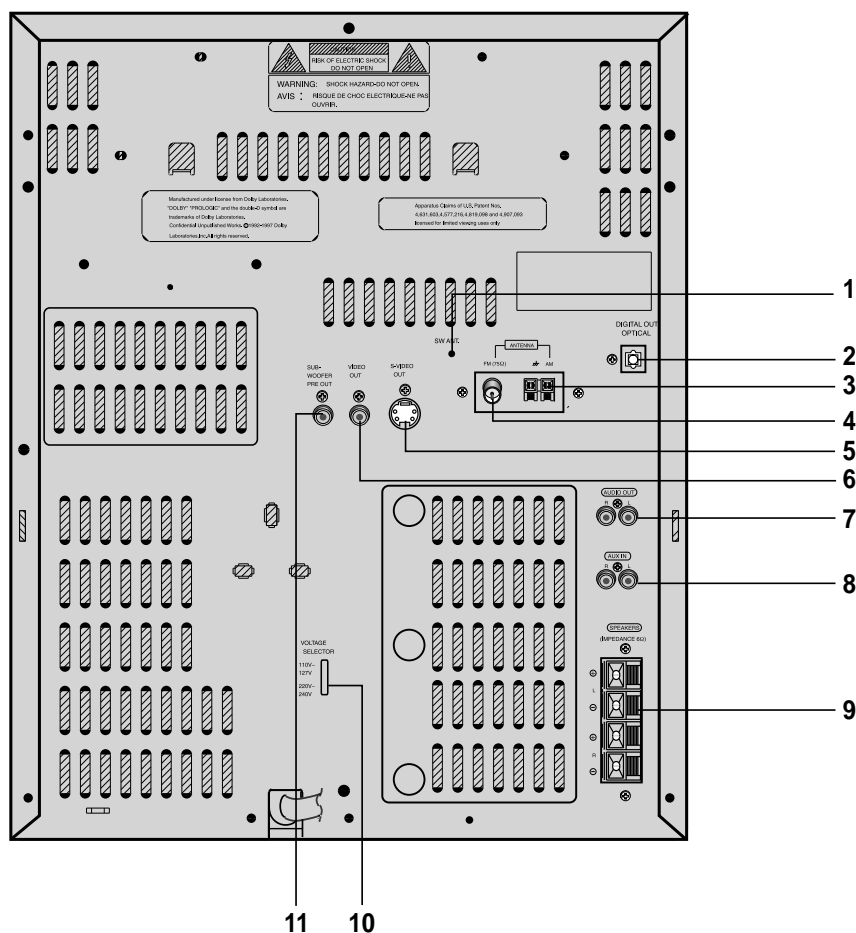 


1. SW AERIAL CONNECTOR TERMINAL (option)
2. DIGITAL OUT JACK
3. AM AERIAL CONNECTOR TERMINAL
4. FM AERIAL CONNECTOR TERMINAL
5. S-VIDEO OUT
6. VIDEO OUT
7. AUDIO OUT
8. AUX INPUT
9. MAIN SPEAKER CONNECTOR TERMINALS
10. VOLTAGE SELECTOR(option)
11. SUB WOOFER PRE OUT

Where to Install Your Mini-Compact System

To take full advantage of your new mini-compact system, follow these installation instructions before connecting the unit.

 - ◆ Install the system on a flat, stable surface.
- ◆ Never place this unit on carpeting.
- ◆ Never place this unit in an outdoor area.
- ◆ Maintain an open space of approximately 6 inches (15 cm) on the sides and rear of the system, for ventilation purposes.
- ◆ Make sure that you have enough room to open the compact disc compartment easily.
- ◆ Place the loudspeakers at a reasonable distance on either side of the system to ensure good stereo sound.
- ◆ Direct the loudspeakers towards the listening area.
- ◆ For optimum performance, make sure that both speakers are placed at an equal distance above the floor.

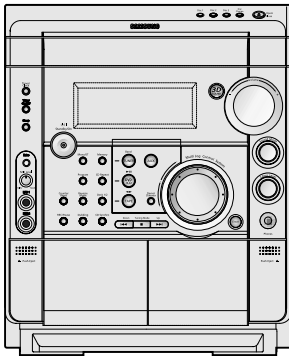


Connecting your System to the Power Supply

The main lead must be plugged into an appropriate socket.

- ⚠ Before plugging your system into a main socket, you must check the voltage setting (OPTIONAL). If the voltage of the socket does not correspond to the setting on the rear of the unit, you may seriously damage your system.

 - 1 Check the position of the voltage selector on the rear of the system (OPTIONAL).
- 2 Plug the main lead (marked **AC Cord** on the rear of the system) into an appropriate socket.
- 3 Press the **On/Standby** button to switch your mini-compact system on.

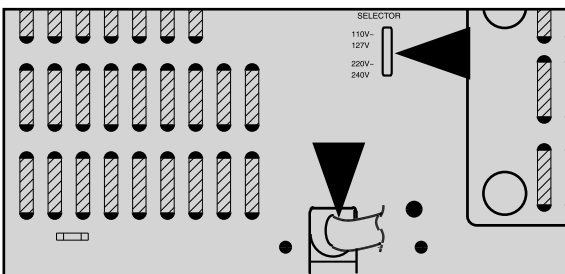

Connecting the Loudspeakers

The loudspeaker connector terminals are located on the rear of the system.

 
There are four terminals on the system:

- ◆ Two for the left speaker (marked L)
- ◆ Two for the right speaker (marked R)

To achieve the correct sound quality, connect the:

- ◆ Red wire to the + terminals
- ◆ Black wire to the - terminals

- 1 Press and hold the terminal tab.
- 2 Insert the speaker cord.
- 3 Release the finger.

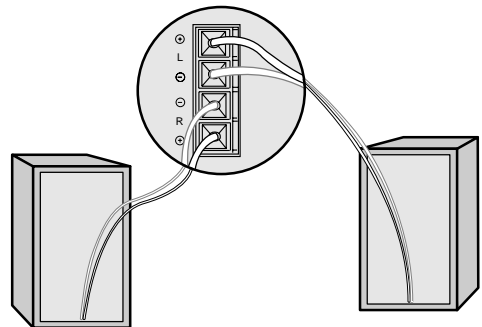

Directions in Installing Speaker

- ◆ Installation in a place near heating apparatus, under direct lay of light or with high humidity may cause performance degradation of the speaker.
- ◆ Do not install on the wall or on a high place of pole or other unstable place to prevent any safety accident caused by falling of the speaker.
- ◆ Do not take the speaker apart from TV or computer monitor. The speaker near the TV or computer monitor may influence the quality of the screen display.

 
Connection of the subwoofer (optional)

GB

The subwoofer generates low-pitched tones.
(Ex. Explosion, the sound of spacecraft flying, the sound of pondering, etc.)


● Connect the subwoofer (not supplied)

- ◆ Connect the subwoofer cord to the SUBWOOFER IN and SUB WOOFER PRE OUT terminal.
- ◆ Plug the AC Cord on the rear of the SUBWOOFER into an appropriate socket.

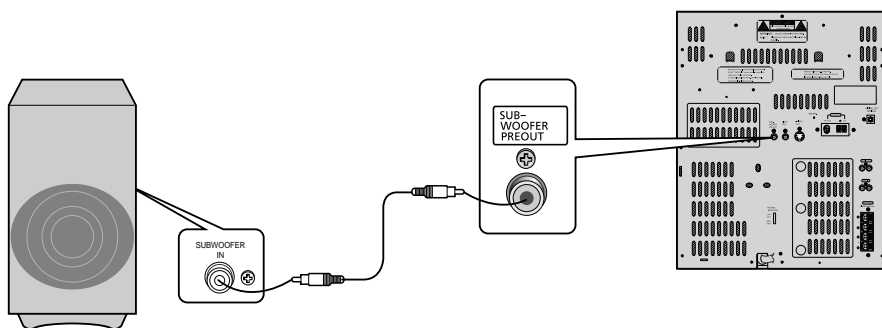

Connection of the TV monitor and VCR (optional)

 The following show examples of connections commonly used to connect the DVD player with a External Source.
(Example : TV, VCR, DAT CD-RW, etc)

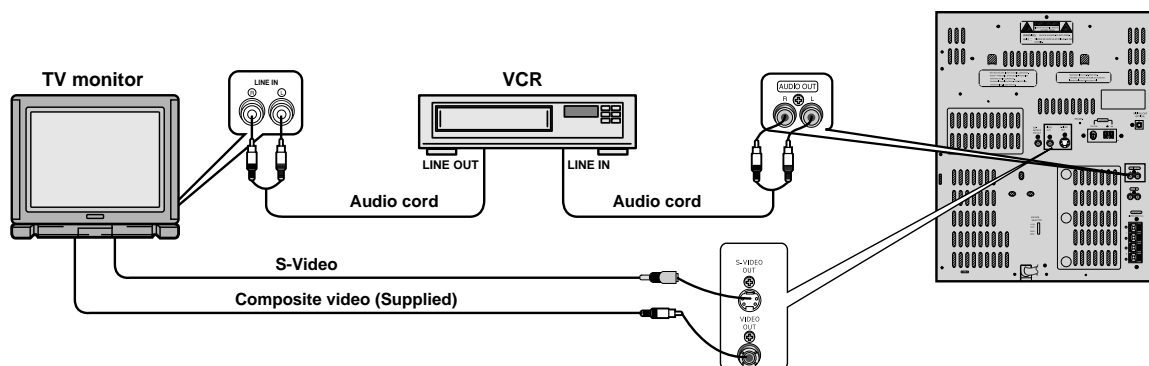

➤ • When S-VIDEO is connected, S-VIDEO has priority.

Connection for better sound

GB

 
Connecting to an amplifier with Dolby Pro Logic support.

DVD/CD Digital Out Jack


This unit can output DVD/CD digital sound signals through this jack. Use an optical cable to connect digital audio equipment. (DAT deck, MD recorder, etc.). Remove the dust cap (1) from the DVD/CD DIGITAL OUT jack. Then, connect an optical cable plug to the DVD/CD DIGITAL OUT jack.

When the DVD/CD DIGITAL OUT jack is not being used Attach the supplied dust cap.


➤ While playing a DTS disc, no sound is reproduced. In this case, connect to an external amplifier.

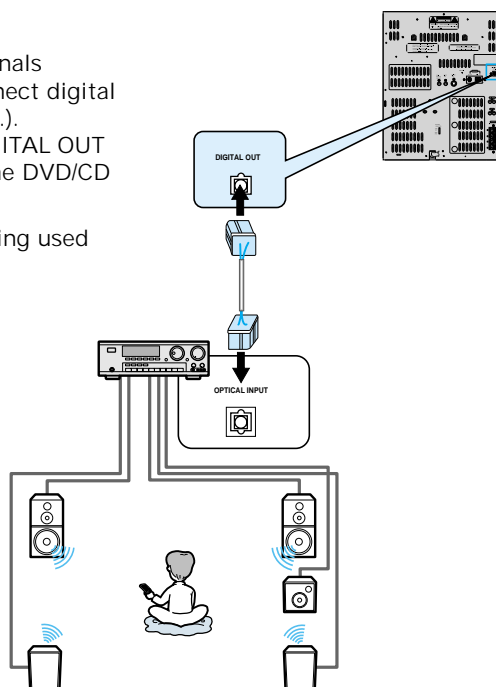


Insert Remote Batteries

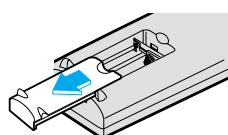 

 1 Remove the battery cover on the back of the remote by pressing down and sliding the cover in the direction of the arrow.

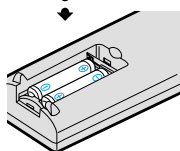

 2 Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and -).

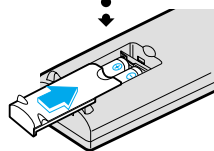

3 Replace the battery cover.



Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity:(+) to (+)and (-)to (-).
- Use the correct type of batteries.Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

Connecting the AM (MW) Aerial

 
GB

The AM aerial (for long and medium waves) can be:

- ◆ Placed on a stable surface
- ◆ Fixed to the wall (you must first remove the base)

The **AM** aerial connector terminals are located on the rear of the system and are marked **AM**.


- ☛ To avoid noise interference, check that the loudspeaker wires do not run close to the aerial wires. Always keep them at least 2 inches (5 cm) away.

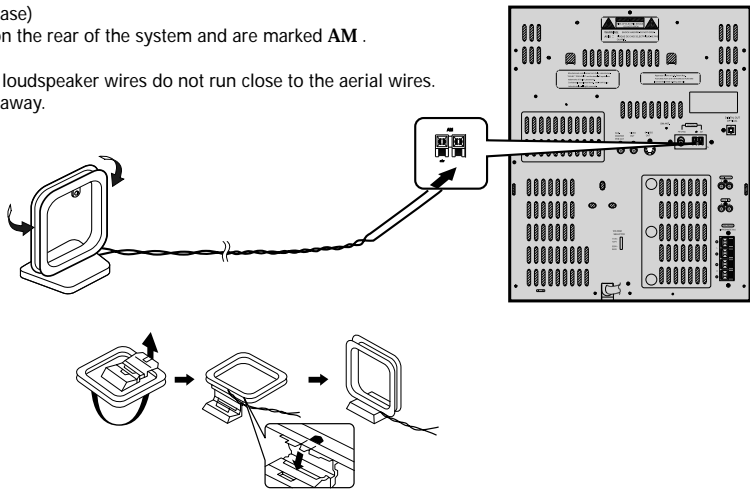

Connecting the FM Aerial

How to connect a COAXIAL TYPE aerial.

 
- ◆ Connect a 75Ω antenna to the **FM** antenna terminal.
- ◆ Plug the connector on the **FM** aerial supplied into the coaxial socket (75Ω) marked **FM** on the rear of the system.
- ◆ Follow the instructions given on Page 21 to tune into a radio station, and determine the best position for the aerial.
- ◆ If reception is poor, you may need to install an outdoor aerial.
To do so, connect an outdoor **FM** aerial to the **FM** socket on the rear of the system using a 75Ω coaxial cable (not supplied).

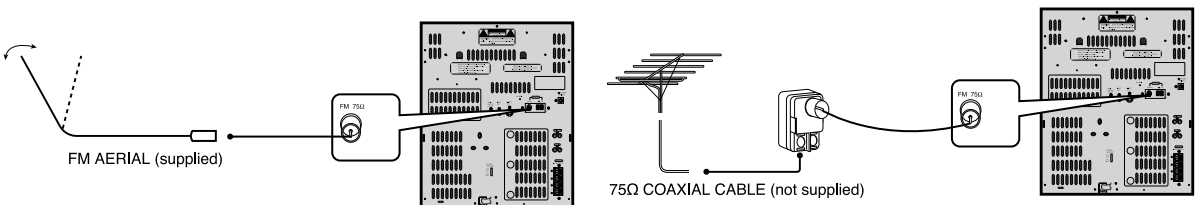

Connecting the SW Aerial (OPTION)

How to connect a WIRE TYPE aerial.

 
- ◆ Spread the **SW** aerial out and attach the ends to a wall, in the position providing the best reception.
- ◆ If reception is poor (e.g. distance from transmitter too great, walls blocking the radio waves, etc.), install an outdoor aerial.

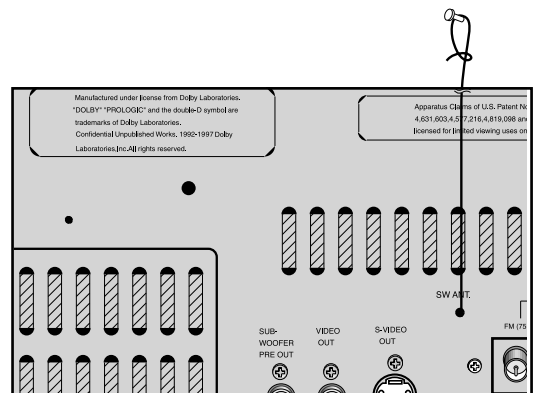

Demo/Dimmer function

All functions available on the system can be viewed on the display and the display's brightness can be switched between "on" and "off".

 - 1 Press the **Demo/Dimmer** button.
Result: All functions available on the system appear on the front panel display.
- Each of these are explained in detail in this guide. Please refer to the relevant section.
- 2 Press the **Demo/Dimmer** button again.
Result: The Dimmer function is selected and the display darkens.
- Press the **Demo/Dimmer** button once again to brighten the front panel display.
- 3 A display brightness control can only be performed while the system power is on.


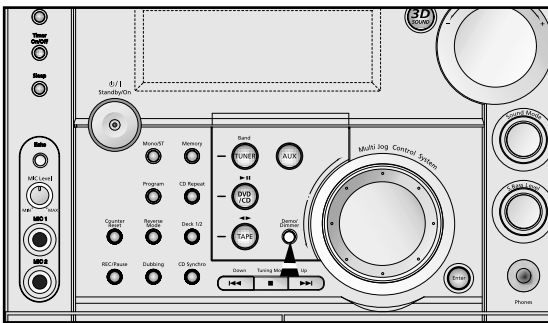


NTSC/PAL Selection Method

According to a DISC or TV, Press the **REC/Pause** button on the front panel.

Set the system to standby(power off) mode, press the **REC/Pause** button on the front panel.

  Result: Each time the **REC/Pause** button is pressed, the following appears in the display:

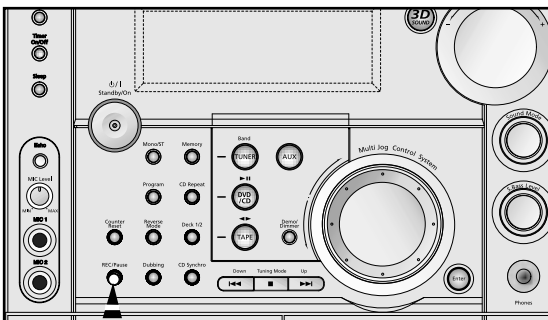

Setting the Clock

 
Your system is equipped with a clock which allows you to turn your system on and off automatically. You should set the clock:

- ◆ When you purchase the mini-compact system
- ◆ After a power failure
- ◆ After unplugging the unit

➤ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1 Switch the system on by pressing **On/Standby**.
- 2 Press **Timer/Clock** twice.
Result: **CLOCK** is displayed.
- 3 Press **Enter** on the front panel.
Result: The hour flashes.
- 4 **To...** Turn the Multi Jog knob to the...
Increase the hours Right
Decrease the hours Left
- 5 When the correct hour is displayed, press **Enter** on the front panel.
Result: The minutes flash.
- 6 **To...** Turn the Multi Jog knob to the...
Increase the minutes Right
Decrease the minutes Left
- 7 When the correct time is displayed, press **Enter** on the front panel.
Result: The clock starts and is displayed, even when the system is in standby mode.

- You can display the time, even when you are using another function, by pressing **Timer/Clock** once.
- ◆ You can also use **◀▶** / **▶▶** buttons to instead Multi Jog knob in step 4,6.

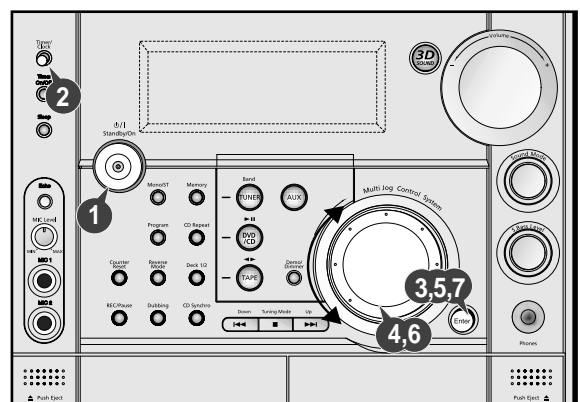

Playing a Disc

Playback

- 1 Press the **Open/Close**(▲) button.
- 2 Place a disc gently into the tray with the disc's label facing up.
- 3 Press the **Play/Pause**(▶||) button or **Open/Close**(▲) button to close the disc tray.

Pausing Playback

Press the Play/Pause (▶||) button during playback.


◆ To resume, press the Play/Pause (▶||) button again.

- ◆ Depending on the disc, the initial disc information screen may look disc to disc.
- ◆ When playing a DVD containing MPEG format, video may not be reproduced correctly and you may get picture distortion.

Stopping Playback

Press the Stop (■) button during playback.

- ◆ During playback, when the Stop (■) button is pressed, the position is stored in the memory, and ►■ STOP is shown on the display. When the Play/Pause (▶||) button or Return button is pressed subsequently, playback resumes from the position at which it was stopped.
- ◆ If the Stop (■) button is pressed a second time, the resume play' memory function is canceled, and ■ STOP is shown on the display. When the Play/Pause (▶||) button is pressed, playback starts from the beginning.

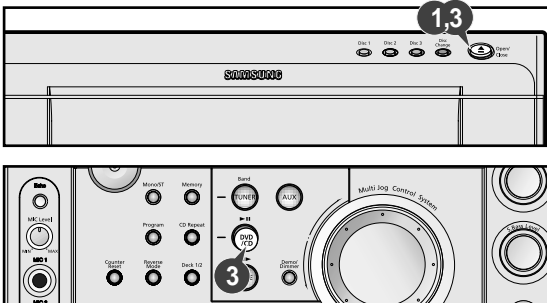 


Selecting a Disc in the CD changer

The CD function is automatically selected when DISC SKIP is pushed.

To select a specific disc, press the corresponding Disc (1, 2, 3) button on the front panel or Disc Skip on the remote control, until the required disc indicator flashes.


 
- ◆ If you use the Disc (1, 2, 3) function when listening to the radio or to a tape, the system switches automatically to the DVD/CD mode.
- ◆ If the disc selected is not loaded, the next disc is played automatically.

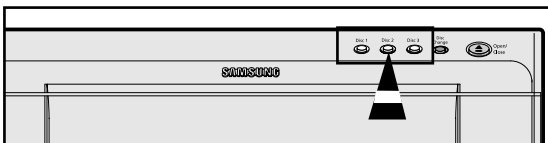

DVD Playback

Using the On-Screen Display

  Press the **Display** button on the remote.

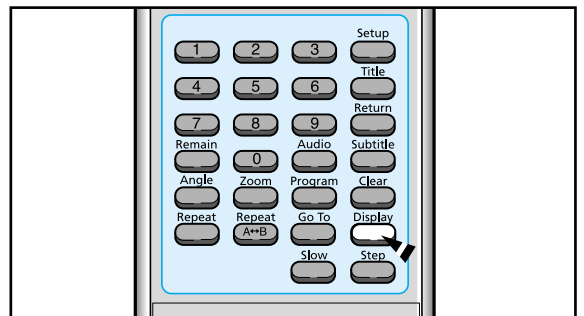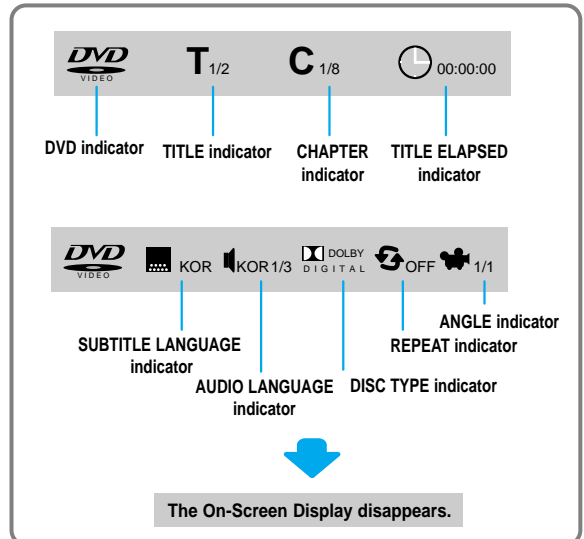

What is a Title?

- ◆ A movie contained in a DVD disc.

What is a Chapter?

- ◆ Each Title on a DVD disc is divided into several smaller sections called "chapters".

Turning the sound off temporarily?

Press the Mute button during playback.

 
- ◆ This operation may be useful when you need to greet the guests or answer the telephone.
- ◆ If the player is left for more than 3 minutes in pause mode, it will stop.

Forward/Reverse Searching


During playback, you can search quickly through a chapter or track for a specific scene or tune.

High-Speed Playback

Press the ◀◀ and ▶▶ button.

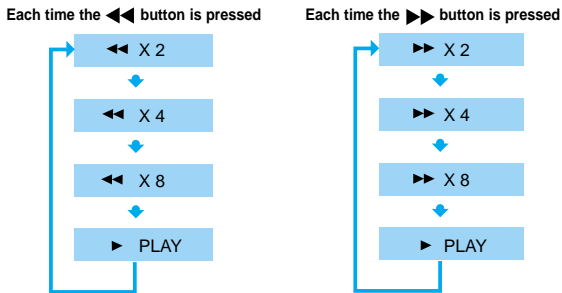

 
◆ ◀◀ playback (reverse playback) is possible on DVDs.

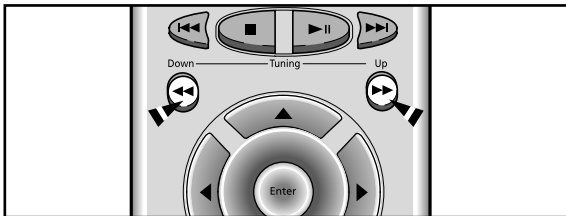

Skipping through a Chapter

Press the ◀◀ and ▶▶ button.

 - ◆ Each time the button is pressed during playback, it moves to the next or previous chapter and plays it.
- ◆ However, you cannot skip forward or backward through consecutive the chapters.

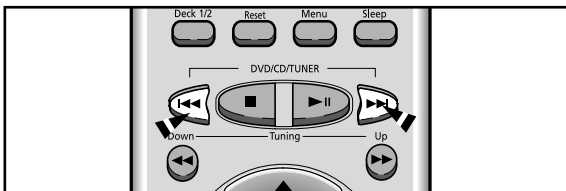

Playing Frame by Frame

 
Press the Step button.

- ◆ The picture moves forward one frame each time the button is pressed.
- ◆ No sound is heard during high-speed playback and step motion.

To move directly to a title, chapter, or time


1 Press the Go To button.

◆ Each time the button is pressed, it repeats as shown below.



2 Press Number(0-9) button or the Left/Right (◀/▶) button.

 - ◆ Each The desired scene is located and then played.
- ◆ Depending on the disc, the Title function may not work.

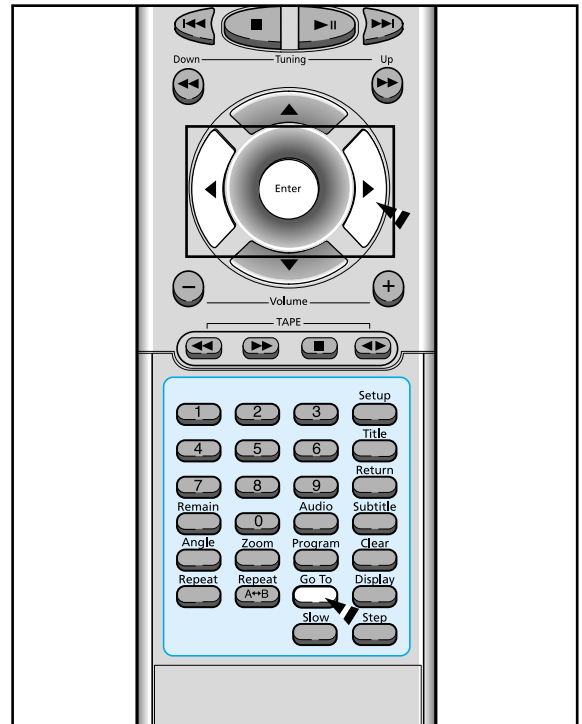



Slow Playback/Checking the Remaining Time

GB

Playing Slowly

Press the **Slow** button.

  Each time the Slow button is pressed

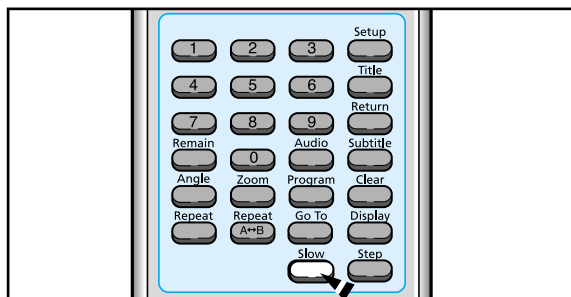
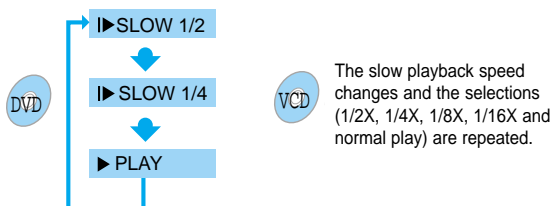


Checking the Remaining Time

Press the **Remain** button.

- For checking check the total time and the remaining time of a title or chapter being played.

  Each time the Remain button is pressed

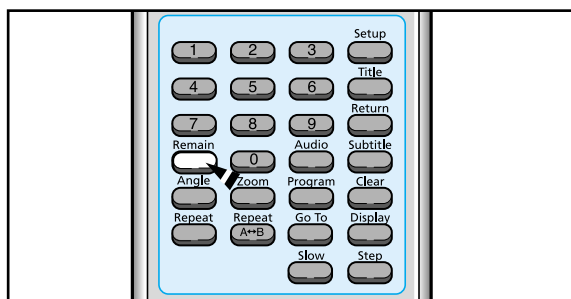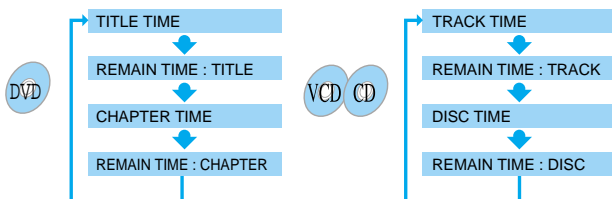



Repeat Playback

Repeat playback allows you to repeat a chapter, title, or track.

Playing Repeatedly

Press the **Repeat** button.

  
Each time the Repeat button is pressed

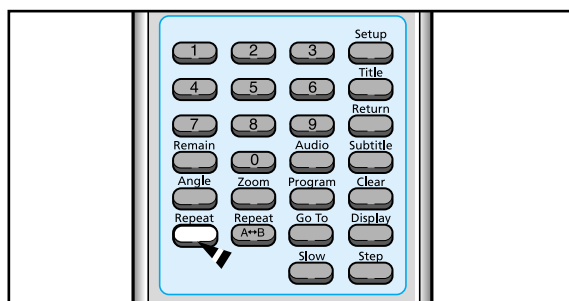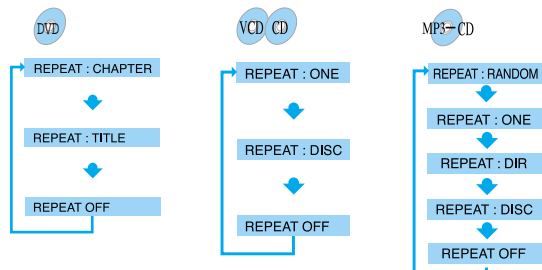

- Repeat playback operation is not possible with version 2.0 VCD discs if PBC is turned on. To operate this feature, press the MENU button, and then select "PBC OFF".


A↔B Repeat Playback

 - Press the **Repeat A↔B** button at the beginning (A) of the segment you want to review.
- Press the **Repeat A↔B** button again at the end (B) of the segment you want to review.
 - The segment will begin repeating.

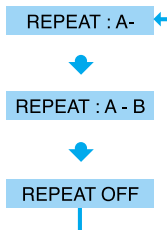

To return to normal playback

 Press the Repeat A↔B button again.

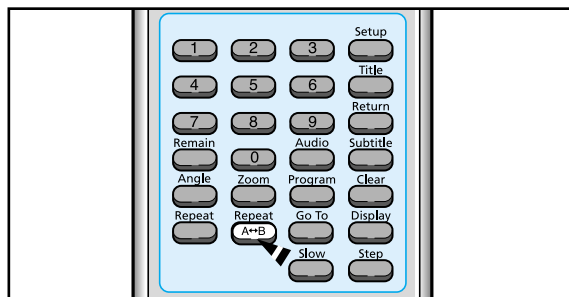


Using Disc Menu/Title

To Select the Disc Menu

You can use the menus for the audio language, subtitle language, profile, etc. DVD menu contents differ from disc to disc.

 
- 1 Press the **Menu** button during playback.
 - ◆ The Menu Screen appears.
 - ◆ When playing a VCD version 2.0, you can operate it using PBC On/Off function.
- 2 Use the **Up/Down** (▲/▼) or **Left/Right** (◀/▶) button to access the different features.
- 3 Press the **Enter** button.
 - ◆ The selected item will play.

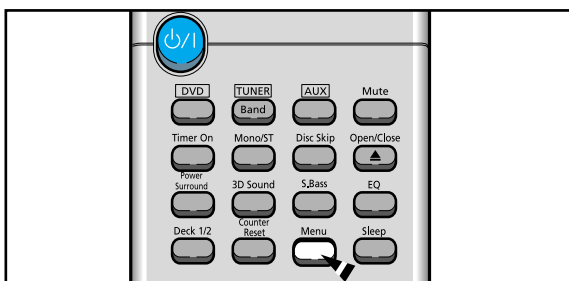

Using the Title Menu

 Press the **Title** button.


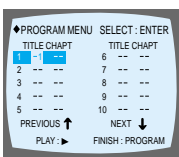 
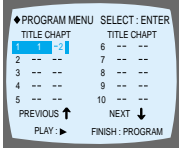 
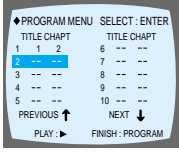 
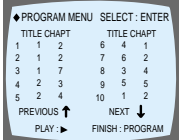 
- ◆ For DVDs containing multiple titles, you can view the title of each movie.
- ◆ Depending on the disc, this function may either not work at all, or may work differently.

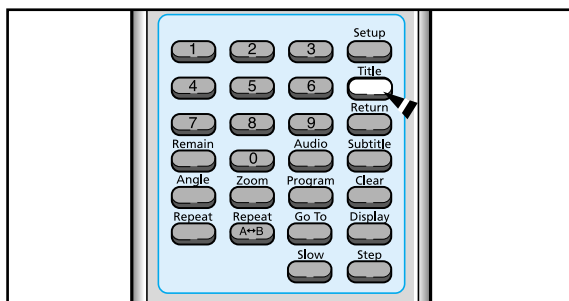


Program Playback

Use this function with video and music CDs to play the tracks in a particular order.

To Program Tracks in a particular order

 - 1 Press the **Program** button.
 
- 2 Press the **Enter** button then use the Number buttons to select the desired title.
 - ◆ You can use also just the **Left/Right** (◀/▶/▲/▼) button.
- 3 Press the **Enter** button, then use the Number buttons to select the desired chapter.
 - ◆ You can use also just the **Left/Right** (◀/▶/▲/▼) button.
- 4 Press the **Enter** button.
 - ◆ The selected track number is programming and the cursor moves to the next number.
- 5 At this time, you can continue programming if you want to.
 - ◆ When programming more than NEXT 10 tracks, select and then press the **Enter** button. The program selection screen where you can program up to 10 additional tracks appears.

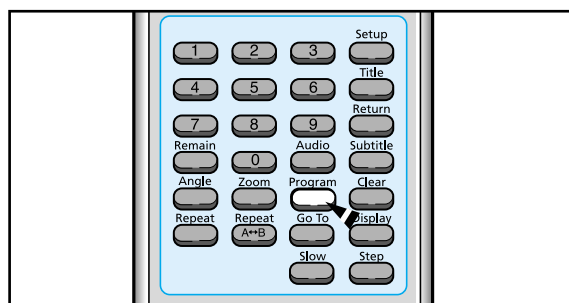

To Playback the Tracks in the Programmed Order

- ◆ Press the **Play/Pause** (▶||) button.

To Cancel the Programming

 
- ◆ Press either the **Program** button or **Stop** (■) button.

Program Playback (Cont'd)

GB

To Change the Program

- 1 Press the **Up/Down** (▲/▼) button to select the track number to be changed.
- 2 Press the **Enter** button to select the title or chapter to be changed.
 - ◆ The cursor moves to the next number when the **Enter** button is pressed again.
- 3 Press the **Clear** button and then press the **Number** buttons.
 - ◆ You can use also just the **Left/Right** (◀/▶) button.
- 4 Press the **Enter** button.
 - ◆ The cursor moves to the number below.
- 5 Repeat steps 1-4 above to change the program.

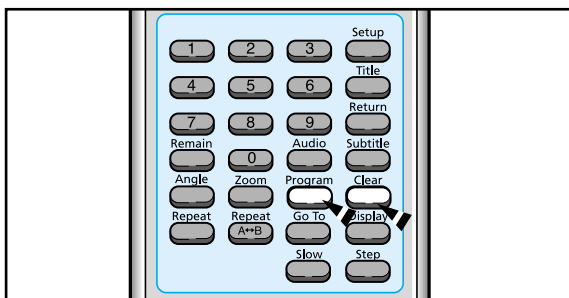

To delete the entire Program

- ◆ Press the **Stop** (■) button twice during playback.
- ◆ Press the **Stop** (■) button once when in the Stop mode.
- ◆ Press the **Open/Close** (▲) button on the main unit. The disc tray will open and then close. The program will then be deleted.

When you have entered a wrong number

Press the **Clear** button.

- ◆ When you want to delete a selection during programming, select the track (or chapter, or title) to be deleted and then press the **Clear** button.

 
- ◆ You can program or change particular tracks for VCD or CD discs in the same manner.

Selecting the Audio Language/Subtitle Language


Selecting the Audio Language

Press the **Audio** button.

- ◆ Depending on the number of languages recorded on a DVD disc, a different audio language (KOREAN, ENGLISH, JAPANESE, etc.) is selected each time the button is pressed.

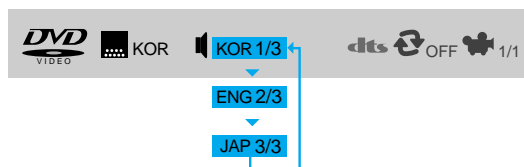

 
- ◆ Depending on the disc, DTS or DIGITAL PRO LOGIC can be selected.

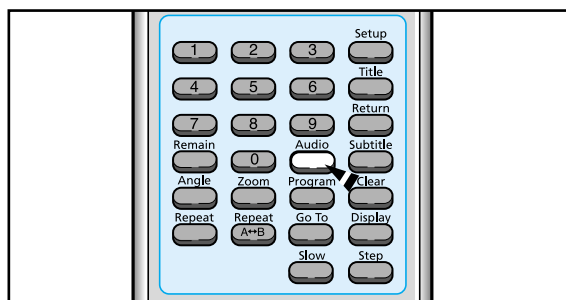


Selecting the Subtitle Language

Press the **Subtitle** button.

 - ◆ Depending on the number of languages recorded on a DVD disc, a different subtitle language (KOREAN, ENGLISH, JAPANESE, etc.) is selected each time the button is pressed.
- ◆ To make the subtitles disappear, select "OFF".

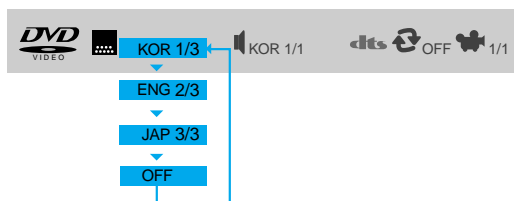

 - ◆ The word **INVALID** appears on the TV screen!
- ◆ If this message appears on the TV screen while buttons are being operated, that operation is not possible with that particular disc.
- ◆ Depending on the disc, the audio or subtitle language function may not work.


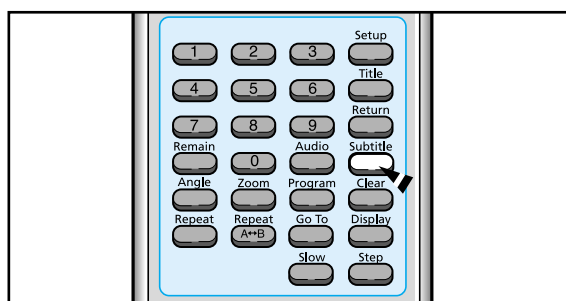


Various DVD Functions

To enlarge an image

Press the **Zoom** button.


 
 
- ◆ Images can be enlarged 2x and 4x.
- ◆ During DVD playback, press the **Zoom** button to zoom in 2X/4X/normal, in that order.
- ◆ Press (◀/▶/▲/▼) to move the enlarged portion you want to watch.

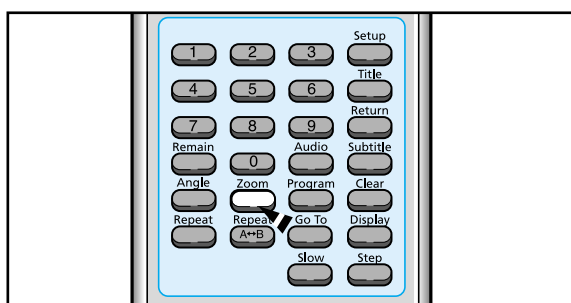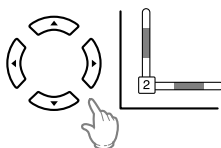

Selecting the desired Screen Angle

Press the **Angle** button.

   - ◆ This function only works with discs on which multiple angles have been recorded.
- ◆ During playback, press the **Angle** button to select the desired angle in 1/3, 2/3, 3/3, normal, in that order.

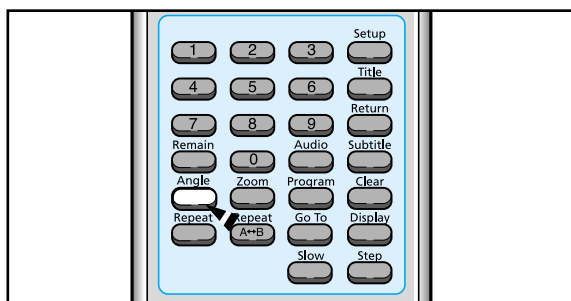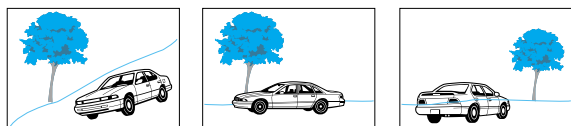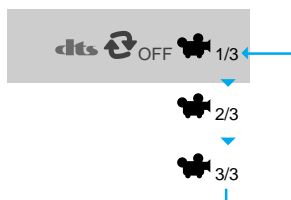



MP3 Playback

This system is incorporated with an MP3 decoder. You can play back MP3 tracks (files) recorded on CD-Rs, CD-RWs, and CD-ROMs.

Starting Playback

- ◆ It is recommended to turn on your TV when playing back an MP3 disc.

- 1 Press the **Open/Close** (▲) button to load a disc.
- 2 Press the **Play/Pause** (▶||) button.
 - ◆ After detecting the disc, playback starts.
 - ◆ The on-screen bar and the contents recorded on the MP3 disc will be shown on the TV if it is turned on.

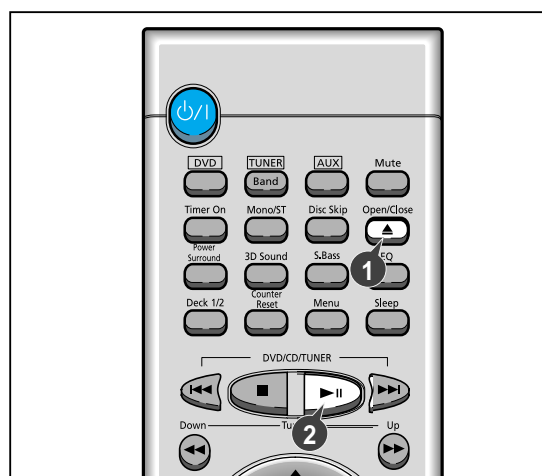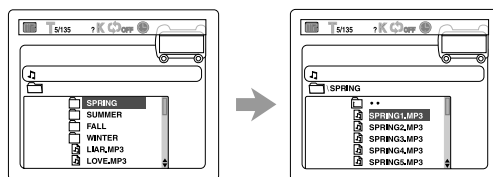  

To stop during playback

Press the **Stop** (■) button.

What is MP3?

MP3 is an abbreviation of Motion Picture Experts Group (or MPEG) Audio Layer 3. MP3 is simply a file format with a data compression ratio of 1:10 (128 Kbps*).

That means, by using MP3 format, one CD-R or CD-RW can contain 10 times as much data volume as a regular CD can.

*Bit rate is the average number of bits that one second of audio data will consume. The measuring unit used is Kbps (1000 bits per second).

To get a better audio quality, choose a higher bit rate. The most popular bit rate for encoding (recording) is 128 Kbps.

MP3 Playback (Cont'd)

To go off the on-screen bar

Press the **Display** button.

- Each time you press the button, the on-screen bar appears in sequence.

1	2	3	4	5	6
	T 1/35	128 K	OFF	00:22/03:48	
On-screen bar goes off.					
1 : Disc type					
DVD VCD CD MP3					
2 : Current track (file) and total number of the tracks on the disc					
• Ex.: 1st track is playing out of 35 tracks recorded.					
3 : Bit rate					
• Ex.: Bit rate used for recording the loaded disc is 128 Kbps. (See below)					
4 : Repeat mode indicator					
• Ex.: When repeat mode is turned off. See page 28 for more details.					
5 : Elapsed playing time and the total playing time of the current track					
6 : Sound indication					
• Indicates sound input level. (Only appears during playback.)					

MP3 File Compatibility

- This system can only read MP3 files that are recorded in the format that is compliant with ISO 9660 Level 1 or Level 2.
- The system can read or play MP3 files only with the extension code —“.mp3”.
- ID3*tags cannot be shown on the display.
*An MP3 file can contain file information called “ID3 Tag” where its album name, performer, track title, etc. are recorded. There are two versions —ID3v1 (ID3 Tag version 1) and ID3v2 (ID3 Tag version 2).

 
CD-R/RW playback compatibility

- Your DVD player can also play CD-R and CD-RW discs recorded in digital audio format. When recording your own CD-R or CD-RW discs, make sure that the recording session is properly terminated, or they will not be playable. (Depending on disc properties and recording quality, some CD-R/RW may not be playable.)
- CD-RW has a lower reflection rate than CD-R media and consequently it will take a longer to read CD-R discs.
- CD-RW discs recorded at high speed tend to be difficult for the DVD player to read. If the recording speed for the CD-RW disc is not predetermined, write it at low speed.


Operations Using the On-Screen Display

- It is recommended to turn on your TV when playing back an MP3 disc.

- When the loaded MP3 disc is recognized, the following on-screen display appears on the TV screen.
(The contents of this on-screen display varies according to the disc — the way MP3 tracks were recorded on the disc.)

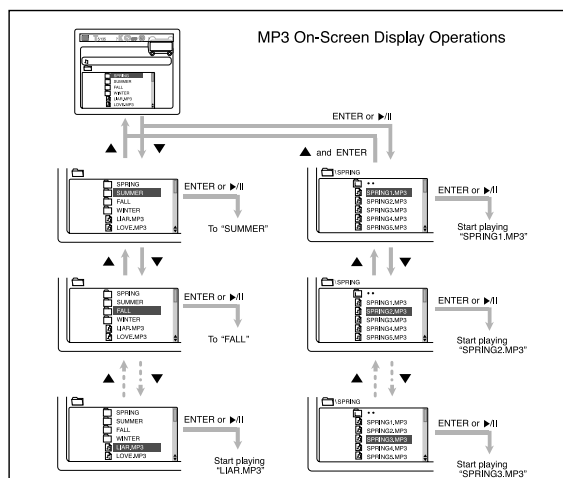

Button	To do
ENTER, >II	Start playback or go into a directory.
▲/▼	Select a track or directory.

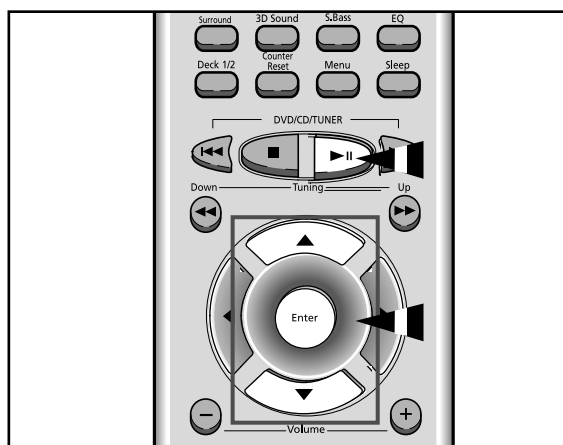 


MP3 Playback (Cont'd)

Repeating Playback

- ◆ On an MP3 disc, Repeat A+B cannot be used.
You can enjoy only repeat play.

Press the **Repeat** button.

 - ◆ The indication corresponding to the selected mode appears on the TV screen.
- ◆ Each time you press the button, repeat mode changes as follows:



REPEAT:RANDOM

: All tracks recorded on the disc will be played once at

REPEAT:ONE

: Current track will be repeated.

REPEAT:DIR

 
: Tracks in the current directory will be repeated.

REPEAT:DISC

: All tracks on the disc will be repeated.

REPEAT OFF

: Repeat play is canceled.(Normal play is resumed.)

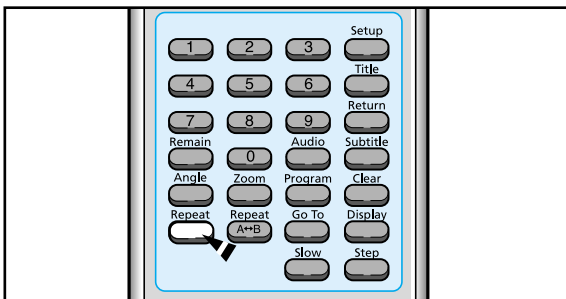


System Setup


You can use the DVD player's Setup function to select the TV screen ratio, rating limit, or digital output mode.

To Set up the System

 
- 1 From the stop mode, press the **Setup** button.

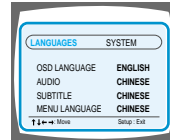

 - 2 Press the **Left/Right** (◀/▶) button to select the system.

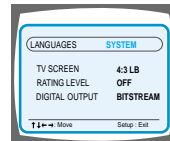


 - 3 Press the **Up/Down** (▲/▼) button to select the desired item.


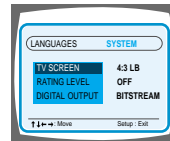


- 4 Press the **Enter** button or **Right** (▶) button.

 - ◆ Move to the detailed items.
- ◆ Then press the **Left** (◀) button to return to the previous step.

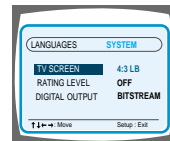

  - 5 Press the **Up/Down** (▲/▼) button to select the desired sub-item and then press the **Enter** button.

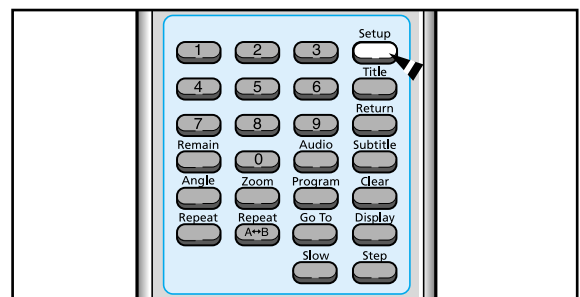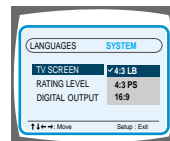

To End the System Setup

 
- ◆ Press the **Setup** button again.

System Setup (Cont'd)



TV SCREEN(TV SCREEN RATIO)

Select when you want to watch a 16:9 screen ratio DVD movie on a TV with a 4:3 ratio screen.

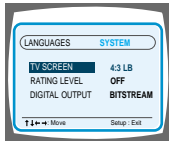

4:3LB

- ◆ You can see the full 16:9 picture, but black bars will appear at the top and bottom of the screen.

4:3PS

- ◆ You can only view the central portion of the 16:9 screen.

 
16:9

- ◆ You can view in wide screen but the top and bottom of the picture will be cut off.


- ◆ However if the movie is recorded in 4:3 ratio, you cannot view the full 16:9 picture with the above functions.

RATING LEVEL


The Rating Level function works in conjunction with DVDs which have been assigned a rating, to help control the type of DVD that your family watches.

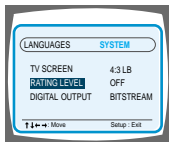

 - 1 Select RATING LEVEL, then press the **Enter** button.

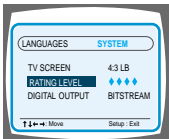

 - 2 Use the number(0~9) buttons to input a 4-digit password.
 - ◆ The player's password is set to "7890" by default.

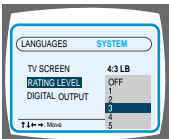

- 3 Use the **Up/Down** (▲/▼) button to select either RATING LEVEL or NEW PASSWORD, and then press the Enter button.
 - ◆ There are up to 8 rating levels on a disc.
 - ◆ If LEVEL 6 is selected, a disc which contains rating LEVEL 7 and above cannot be played.
 - ◆ If you select NEW PASSWORD, the screen changes and enables you to enter the new password.

 
Press Return Button to return to the previous level.

When the rating level password has been forgotten

While the player is in the stop mode, hold the Normal Dubbing button down on the main unit for more than 5 seconds.

- ◆ "INITIAL" appears on the display and all default settings will return to Factory Preset.

DIGITAL OUTPUT

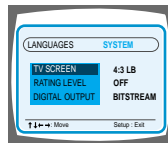

BITSTREAM

Select this if Dolby Digital 5.1 CH connections have been made.

- ◆ Sends a digital signal that carries the Dolby Digital 5.1 or DTS multichannel information to your external decoder.

LPCM

Select this otherwise.

- ◆ Sends a linear PCM(Pulse Code Modulation), or 2 channel stereo signal, to your A/V receiver.

Setting up the Language Features

Using the DVD player's Setup function, you can customize the Menu Language, Subtitle Language, and Disc Menu Language.

To set up the language feature

- 1 Press the **Setup** button from the stop mode.



 
 
- 2 Press the **Up/Down** (▲/▼) button to select the desired item.



- 3 Press the **Enter** button or **Right** (▶) button.
 - ◆ Move to the language features.
 - ◆ Then press the **Left** (◀) button to return the previous step.



- 4 Press the **Up/Down** (▲/▼) button to select the desired language and then press the **Enter** button.

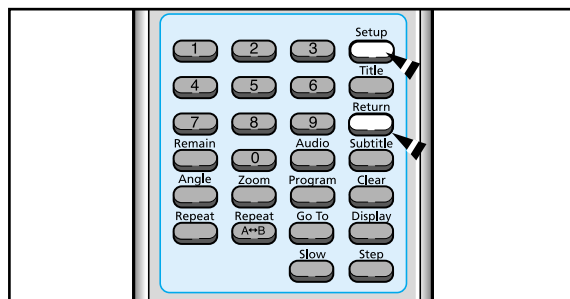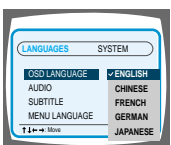

- Press **Return Button** to return to the previous level.

To End the Language Features Setup

- ◆ Press the **Setup** button again.

Searching for and Storing the Radio Stations

You can store up to:

- ◆ 15 FM stations
 - ◆ 15 AM stations
 - ◆ 15 FM stations
 - ◆ 8 MW stations
 - ◆ 7 LW stations
 - ◆ 15 FM stations
 - ◆ 5 MW stations
 - ◆ 5 SW1 stations
 - ◆ 5 SW2 stations
- (option)

- 1 Switch the system on by pressing **On/Standby**.
- 2 Select the **TUNER** function by pressing **TUNER**.
- 3 Select the required frequency band by pressing **TUNER (Band)** again on the front panel or **TUNER (Band)** on the remote control.

Result: The appropriate indication is displayed:

 
- ◆ **FM** Frequency Modulation
- ◆ **AM(MW)** Medium Wave
- ◆ **LW(OPTION)** Long Wave
- ◆ **SW1, SW2(OPTION)** Short Wave

- 4 To search for a station... Press Tuning Mode on the front panel or on the remote control.
 - Manually One or more times until **MANUAL** is displayed.
 - Automatically One or more times until **AUTO** is displayed.

- 5 Select the station to be stored by:
 - ◆ Turning the **Multi Jog** knob to the right or to the left to increase or decrease the frequency respectively
 - or
 - ◆ Pressing **Tuning Down** or **Up** on the remote control
 - ◆ To scroll through the frequencies faster when searching manually, hold down the **Tuning Mode Down** or **Up** buttons.
 - ◆ The automatic search procedure may stop on a frequency that does not correspond to a radio station. If this happens, use the manual search mode.

- 6 Adjust the volume by:
 - ◆ Turning the **Volume** knob on the front panel
 - or
 - ◆ Pressing the **VOL. +** or **-** buttons on the remote control


- 7 Select the FM stereo or mono mode by pressing **Mono/ST**.

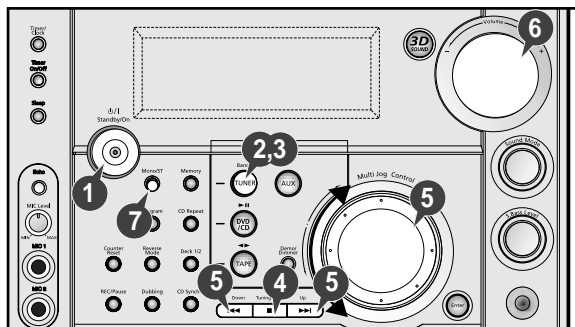

Searching for and Storing the Radio Stations (continued)

- 8 If you do not want to store the radio station found, revert to Step 4 and search for another station.
Otherwise:
- Press **Memory**.
Result: The **PRGM** is displayed for a few seconds.
 - Press **Tuning Down** and **Up** or turn **Multi Jog** to assign a programme number between 1 and 15.
Result: **PRGM** is no longer displayed and the station is stored.
 - Press **Memory** to store the radio station.
Result: **PRGM** is no longer displayed and the station is stored.
- 9 To store any other radio frequencies required, repeat Steps 3 to 8.

 
➤ The PROGRAM function can be used to assign a new station to an existing programme number.

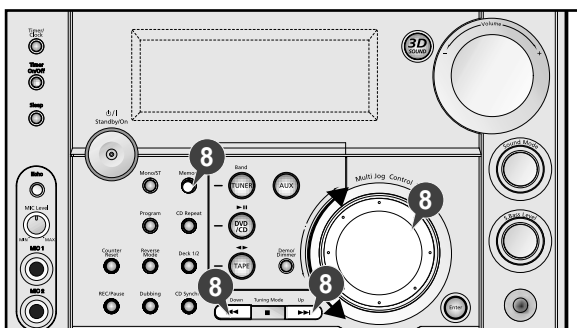

Selecting a Stored Station

You can listen to a stored radio station as follows:

 - Switch the system on by pressing **On/Standby**.
- Select the TUNER function by pressing **TUNER**.
- Select the required frequency band by pressing **TUNER (Band)** on the remote control or **TUNER (Band)** again on the front panel.
- Press **◀▶** button on the front panel of the unit, or the **◀▶** button on the remote control until **"PRESET"** is displayed.
- Turning **Multi-jog** on the front panel left or right until the desired station is found or press **◀▶** to select the desired station.
or
Select the desired station by pressing the station number stored, using the **◀▶** button on the remote control.
Result: The desired station is now received.

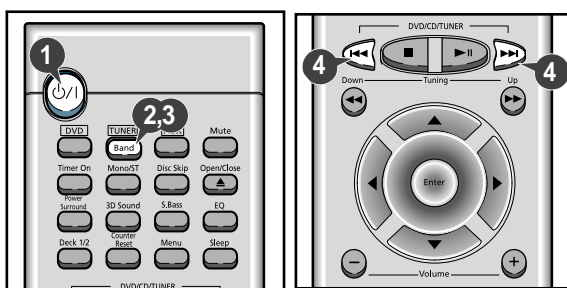


In Tuner mode

- In manual tuning mode, you can use **Multi Jog** or **◀▶** button to manual search a radio station.
- During Tuner auto searching, press **■** button to stop auto searching.
- In Preset tuning mode, you can use **Multi Jog** or **◀▶** button to search a stored radio station.

Improving Radio Reception

You can improve the quality of radio reception by:

 - Rotating the FM or AM(MW) aerial
 - Testing the positions of the FM and AM(MW) aerials before fixing them permanently
- If reception from a specific FM radio station is poor, press **Mono/ST** on the remote control to switch from stereo mode to mono. The quality of the sound will be improved.

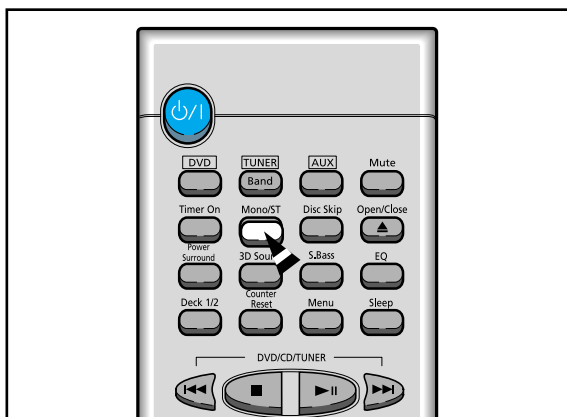

Listening to a Cassette

- Always treat your cassettes with care; refer, if necessary, to the section entitled "Precautions When Using Audio Cassettes" on page 29.

- 1 Switch the system on by pressing the **On/Standby** button.
 - 2 Select the **TAPE** function by pressing **TAPE**.
 - 3 Open either cassette deck 1 or 2 by pushing and releasing the deck cover where **Push Eject** (▲) is written.
 - 4 Insert the pre-recorded cassette with the open edge of the tape facing downward.
 - 5 Close the deck by pushing on it until it clicks into place.
Result: Depending on the deck selected, the 1 or 2 indication is displayed in front of the counter number.
- If you insert a cassette in both decks, the system selects the deck in which you inserted the second cassette.
- 6 If you have inserted two cassettes, press **Deck 1/2** on the front panel or directly the **Deck 1/2** button on the remote control to select the cassette to be played.
Result: Depending on the deck selected, the TAPE 1 or TAPE 2 indication is displayed.

- | To... | Press ... |
|--------------|-----------------------|
| Side A | TAPE (◀▶) once |
| Side B | TAPE (◀▶) twice |
- Result:** The cassette starts playing.

- 8 When the cassette is stopped, select one of the following functions as required.


Main Unit

To...	Press ...
Rewind the cassette	◀◀
Fast-forward the cassette	▶▶

Remote Control

To...	Press ...
Rewind the cassette	◀◀
Fast-forward the cassette	▶▶

- | To... | Press... |
|----------------------------------|----------|
| Stop the playback or search..... | ■ |

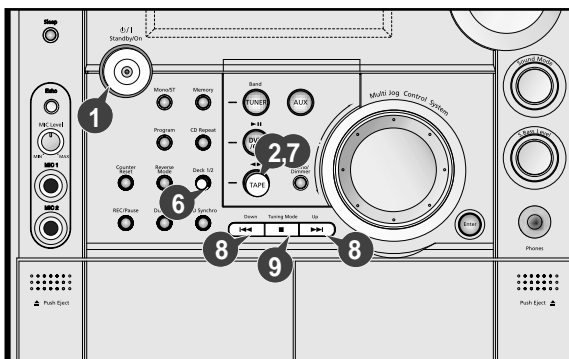 

CD Synchro Record Feature

 
(This function is not available during playback of an MP3-CD.)

You can record a compact disc on a cassette in two different ways:

- ◆ Synchronised recording
- ◆ Direct recording

This feature enables you to synchronize the start of the recording with the start of the disc or track of your choice.

- 1 Switch the system on by pressing **On/Standby**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **CD** function by pressing **DVD/CD** on the front panel.
- 4 Load a compact disc.
- 5 Select the required disc.
- 6 Select the required track and press **CD Synchro** or press **CD Synchro** directly to start recording at the beginning of the disc.
Result: "REC" and "CD SYNC" are displayed and recording starts.
- 7 **To stop...** **Press ...**
Recording and playing the compact disc ■

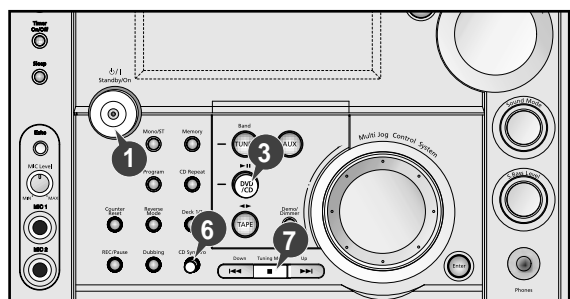


Recording a Compact Disc

The direct recording mode enables you to start recording with any track on the compact disc.

- ◆ You can only record on cassettes in Deck 2.
- ◆ You do not need to adjust the volume, as it has no effect on the recording.

 - 1 Switch your system on by pressing **On/Standby**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **CD** function by pressing **DVD/CD** on the front panel.
- 4 Load the compact disc.
- 5 Select the required disc.
- 6 Select the required track on the compact disc and press **▶II** on the front panel or **▶II** on the remote control to set the compact disc player to Pause mode.
- 7 Press the **REC/Pause**.
Result: REC is displayed .
- 8 Press the **▶II** to start playing the track.
Result: The track is recorded on the cassette.
- 9 When you have finished recording, press **TAPE** ■ on the remote control or ■ on the front panel to stop recording.

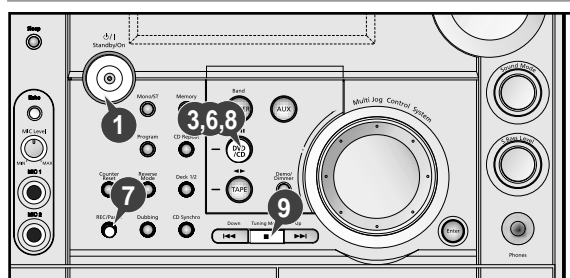


Recording a Radio Program

You can record a radio program of your choice.

- ◆ You can only record on cassettes in Deck 2.
- ◆ You do not need to adjust the volume, as it has no effect on the recording.

 - 1 Switch the system on by pressing **Standby/On**.
- 2 Insert a blank cassette in Deck 2.
- 3 Select the **TUNER** function by pressing **TUNER**.
- 4 Select the radio station that you wish to record by pressing **Tuning** \wedge or \vee on the remote control or by press the \lll \ggg **Down** or **Up** on the front panel.
- 5 Press **REC/Pause**.
Result: "REC" is displayed in red and recording starts.
- 6 To stop recording, press \blacksquare .

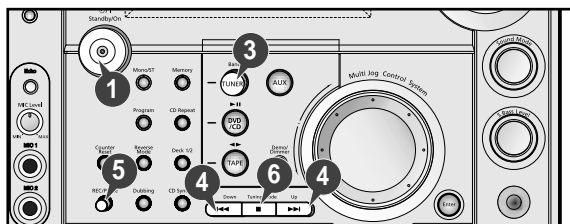


Copying a Cassette (Dubbing)

You can copy a cassette from Deck 1 to Deck 2. Two options are available:

- ◆ Normal speed dubbing
- ◆ You do not need to adjust the volume, as it has no effect on the recording.
- ◆ Take care not to insert the tape to be copied in Deck 2, as it will be erased when you start recording.

 - 1 Switch your system on by pressing **Standby/On**.
- 2 Insert a blank cassette in Deck 2.
- 3 Insert the tape to be copied in Deck 1.
- 4 **To copy a cassette at...** **Press...**
Normal speed
Result: The appropriate indications are displayed and the cassette in Deck 1 is copied to the cassette in Deck 2.
- 5 To stop dubbing, press \blacksquare .

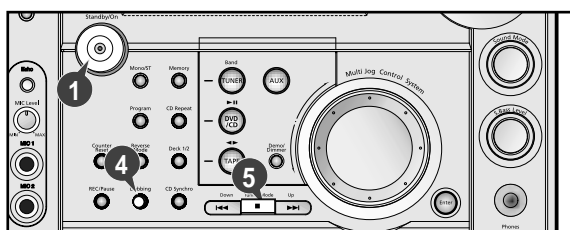


Selecting the Cassette Playback Mode (DECK 2 only)

Your mini-compact system has three cassette playback modes which enable you to listen to both sides of a cassette automatically. Press Reverse Mode until the appropriate symbol is displayed.

When the display indicates... The mini-compact system plays back...

 - \equiv One side of the selected cassette and then stops.
- \cup One side of the cassette. The other side of the cassette and then stops.
- \cup Both sides of the cassette indefinitely until you press stop.

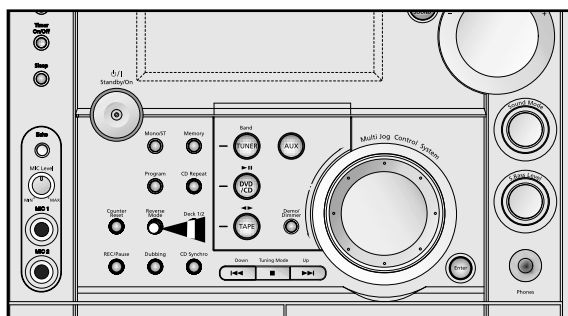


Tape Counter

When playing a cassette, a counter is displayed to enable you to take note of the counter value at the start of each track and thus start playback at the beginning of the track to which you wish to listen.

- The counter is only displayed when a cassette is being played.

 Before starting to record a cassette for which you wish to take note of the counter values at the beginning of each track, reset the counter by pressing **Counter Reset**.

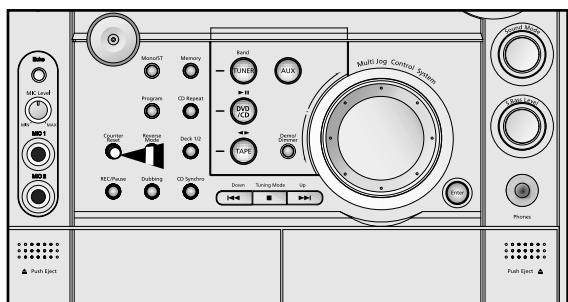

Timer Function

The timer enables you to switch the system on or off at specific times.

Example: You wish to wake up to music every morning.


- If you no longer want the system to be switched on or off automatically, you must cancel the timer.
- ⚡ ♦ Before setting the timer, check that the current time is correct.
- ♦ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1 Switch the system on by pressing **On/Standby**.
- 2 Press **Timer/Clock** until **TIMER** is displayed.
- 3 Press **Enter** on the front panel.
Result: **ON TIME** is displayed (instead of the equalizer symbols) for a few seconds, followed by any switch-on time already set; you can set the timer switch-on time.
- 4 Set the timer switch-on time.
 - a Set the hour by tuning the **Multi Jog** knob to the right or to the left.
 - b Press **Enter** on the front panel.
Result: The minutes flash.
 - c Set the minutes by tuning the **Multi Jog** knob to the right or to the left.
 - d Press **Enter** on the front panel.
Result: **OFF TIME** is displayed (instead of the equalizer symbols) for a few seconds, followed by any switch-off time already set; you can now set the timer switch-off time.
- 5 Set the timer switch-off time.
 - a Set the hour by tuning the **Multi Jog** knob to the right or to the left.
 - b Press **Enter** on the front panel.
Result: The minutes flash.
 - c Set the minutes by tuning the **Multi Jog** knob to the right or to the left.
 - d Press **Enter** on the front panel.
Result: **VOL XX** is displayed, where **XX** corresponds to the volume already set.
- 6 Press **Tuning Down and Up** to adjust the volume level and press **Enter** on the front panel.
Result: The source to be selected is displayed.
- 7 Turn the **Multi Jog** knob to select the source to be played when the system switches on.

If you select...	You must also...
TAPE (cassette)	Insert a recorded cassette in one of the decks before setting the system to standby.
TUNER (radio)	<ol style="list-style-type: none"> a Press Enter on the front panel. b Select a preset station by tuning the Multi Jog knob to the right or to the left.
CD (compact disc)	Load one or more compact discs.

- 8 Press **Enter** on the front panel to confirm the timer.
- 9 Press **On/Standby** to set the system to standby mode.
Result: **⏻** is displayed to the bottom left of the time, indicating that the timer has been set. The system will switch on and off automatically at the required times.

 - If the timer switch on and off times are identical, the word **ERROR** is displayed.

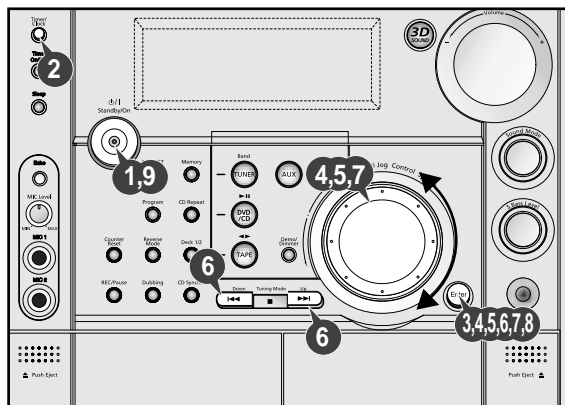

➤ To set the timer function


- ♦ You may use **Multi Jog** or **⏮** / **⏭** buttons to adjust in step 4,5,6,7.

Cancelling the Timer

After having set the timer, it will start automatically as shown by the **TIMER** indication on the display. If you no longer wish to use the timer, you must cancel it.

- You can stop the timer at any time (system on or in standby mode).

To...	Press Timer On...
Cancel the timer	Once. Result: ⏻ is no longer displayed.
Restart the timer	Twice. Result: ⏻ is displayed again.

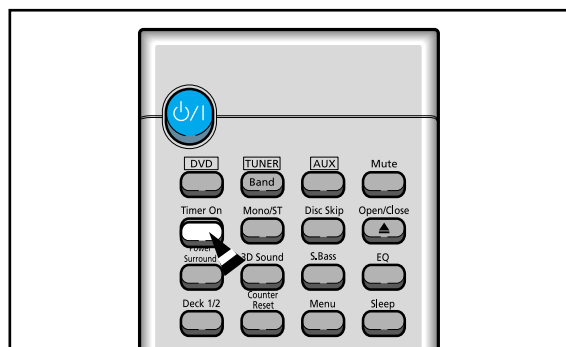 

3D Sound Function

 


3D Sound Function reproduces the sense of wider perspective and more realistic sound effect beyond what conventional stereo can normally provide, resulting in a strong sense of presence, as if you were in the middle of it all.

Press the **3D SOUND** button.

Result: "3D SOUND" appears on the display. You can select 3D SOUND ON and OFF.

➤ This function is only available during playback of an CD.

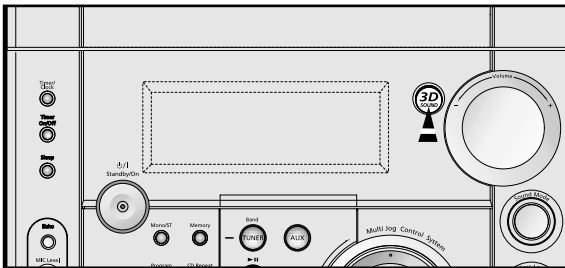


Selecting a Sound Mode

Your mini-compact system is equipped with a preset equalizer that allows you to choose the most appropriate balance between treble and bass frequencies, according to the type of music you are listening to.

Press **EQ** on the front panel or on the remote control until the sound mode is selected.

To obtain a...	Select...
Normal balance (linear)	PASS
Balance suitable for pop music	POP
Balance suitable for rock music	ROCK
Balance suitable for classic music	CLASSIC
Balance suitable for hall	HALL
Balance suitable for live	LIVE
Balance suitable for cinema	CINEMA

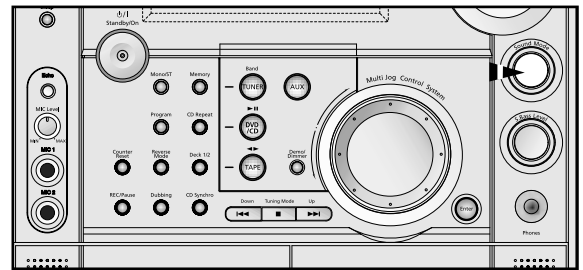 


Mute Function

You can turn the sound off temporarily on your system.

Example: You wish to answer a telephone call.

 - 1 Press **Mute**.
- 2 To switch the sound back on (at the same volume as before), press **Mute** again or the **Volume** buttons.

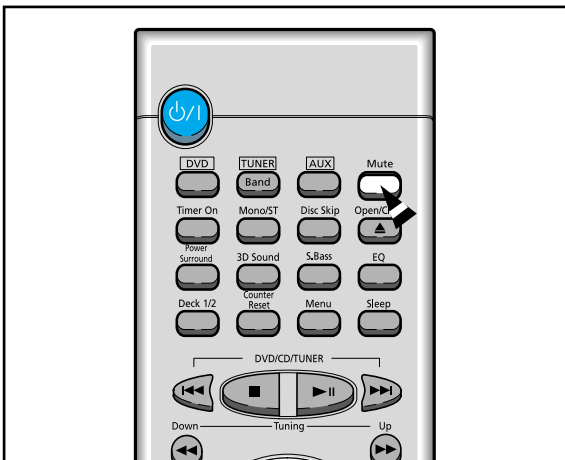

Power Surround Function

 
Your mini-compact system is equipped with the function of Power Surround .

The function of Power Surround amplifies bass and improves high key or bass twice as much for you to appreciate powerful real sound.

➤ To select **Power Surround**


◆ Press **Power Surround** button on the front panel, "P. SURR" is displayed.


◆ To cancel this function, press **Power Surround** button again and "OFF" is displayed for a few seconds.

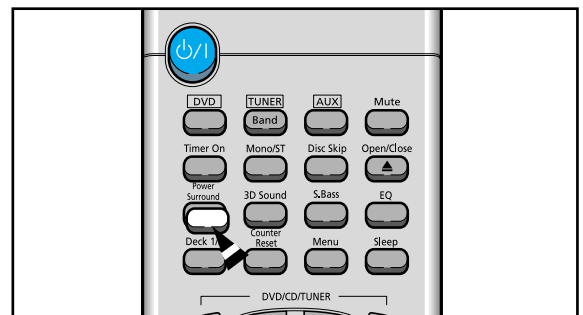

Setting the System to Switch off Automatically

 While listening to a compact disc or a cassette, you can set the system to switch off automatically
Example: You wish to go to sleep to music.

 
- 1 Press **Sleep**.
Result: playback starts and the following indications are displayed:
90 MIN
- 2 Press **Sleep** one or more times to indicate how long the system should continue playing before it switches off:

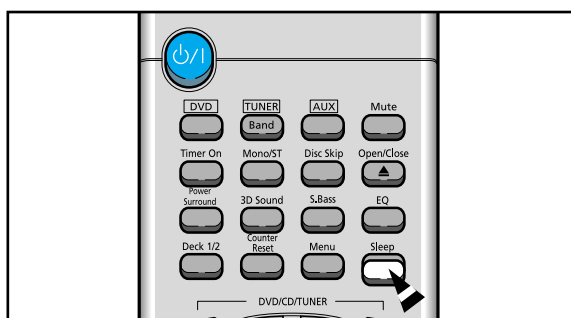 - At any time, you can:
 - ◆ Check the remaining time by pressing **Sleep**
 - ◆ Change the remaining time by repeating Steps 1 and 2
- 3 To cancel SLEEP function, press **Sleep** one or more times until **OFF** is displayed.



Super Bass Sound

 Your mini-compact system has a bass amplification function called S.Bass (Super Bass Sound). This function makes the sound more powerful and real.

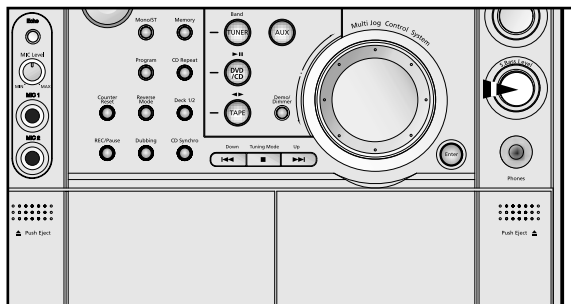- 1 Turn **S.Bass Level** knob on the front panel or press the **S.BASS Level** button on the remote control.
Press the button on the remote control repeatedly to select
OFF → S-BASS1 → S-BASS 2 → S-BASS3 → S-BASS4.
or turn the knob on the front panel repeatedly to select
OFF ↔ S-BASS1 ↔ S-BASS2 ↔ S-BASS3 ↔ S-BASS4
- 2 You can select the level of low tones you desired.

 


Connecting Headphones

You can connect a set of headphones to your mini-compact system so that you can listen to music or radio programmes without disturbing other people in the room. The earphones must have a 3.5 ø jack or an appropriate adapter.

Connect the headphones to the **Phones** jack on the front panel.
Result: The loudspeakers are no longer used to output the sound.

- Prolonged use of headphones at a high volume may damage your hearing.

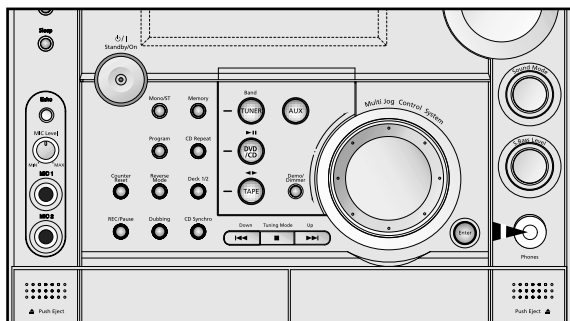


Microphone Function(option)

The microphone enables the user to mix in his or her vocals to sing-along with the music.

Preparation
Plug the microphone with a 6.3ø mic jack into microphone terminal.

- 1 Turn the **Mic Level** knob to adjust the **MIC1**, **MIC2** volume.
- 2 Press **Echo** button to select **ECHO1**, **ECHO2**, **ECHO OFF**.

 - The **Power Surround** function is not available if plugging the Microphone into **Mic** jacks.

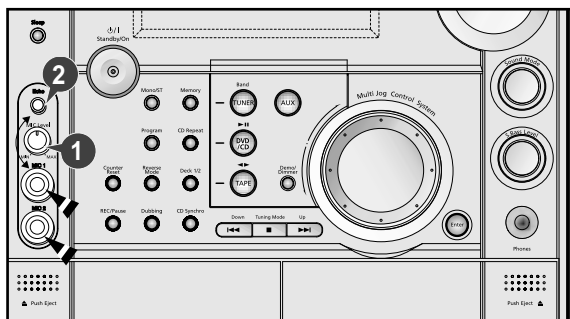

Connecting to an External Source

GB

The auxiliary input can be used to take advantage of the sound quality of your mini-compact system when listening to other sources.

- Examples:**
- ◆ A television
 - ◆ A video disc player
 - ◆ A DAT or DCC cassette player
 - ◆ A Hi-Fi stereo video cassette recorder

➤ To connect the external source, the source must have an audio output. In addition, you need an RCA connection cable.

1 Set the system to standby mode and disconnect it and the external source from the main.

2 Connect the audio cable to the rear of the mini-compact system.

Connect the... To the connector marked...

Red jack R (right)
White jack L (left)

➤ For optimum sound quality, do not invert the right and left channels.

 
 
3 Plug the system back into the main socket and press **On/Standby** to switch it on.

4 Select the AUX source by pressing **AUX** on the front panel.
Result: AUX is displayed.

5 Switch the external source on.


6 Adjust the volume and balance as required:
◆ Volume ◆ Equalizer

Example: You can watch a film and take advantage of stereo sound provided that the original sound track is in stereo, (as if you were in a cinema).

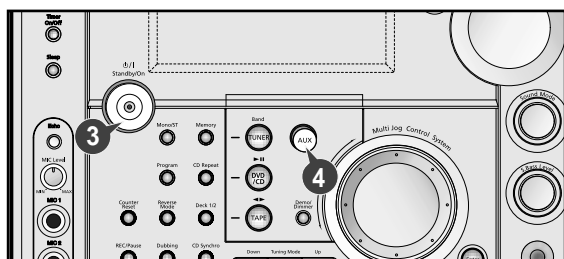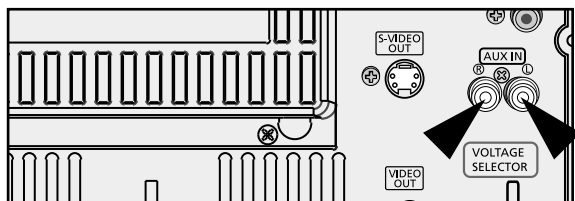


Safety Precautions


The following diagrams illustrate the precautions to be taken when using or moving your mini-compact system.

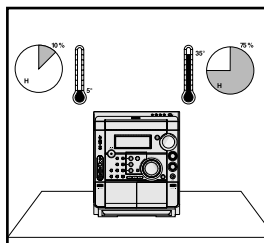 

 
Ambient operating conditions:
Ambient temperature 5°C-35°C
Humidity 10-75%

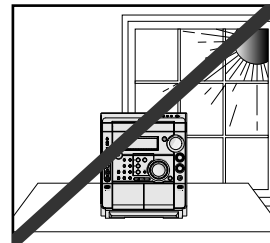

 
Do not expose the unit to direct sun radiation or other heat sources. This could lead to overheating and malfunction of the unit.

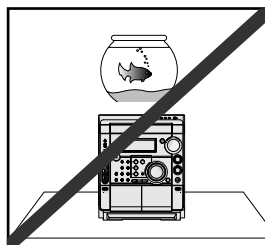

 
Do not place potted plants or vases on top of the unit. Moisture entering the unit could lead to dangerous electric shock and can cause equipment damage. In such events immediately disconnect the main plug from the socket.

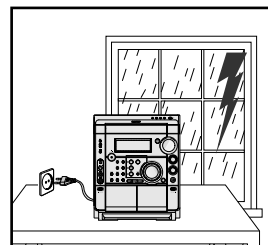

 
During thunderstorms, disconnect the main plug from the socket. Main voltage peaks due to lightning could damage the unit.

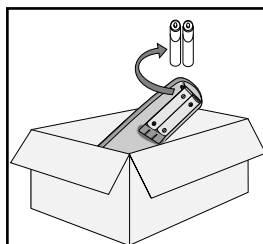

 
Remove the batteries from the remote control, if not used for any extended periods. Leaking batteries can cause serious damage to the remote control.

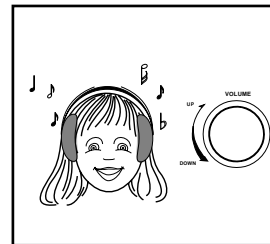

 When using headphones, take care not to listen at excessive volumes. Extended use of headphones at high volumes will lead to hearing damage.

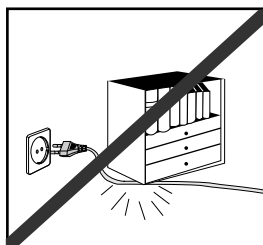

 Do not place heavy items on the main lead. Main cable damage can lead to damage of the equipment (fire hazard) and can cause electric shock.

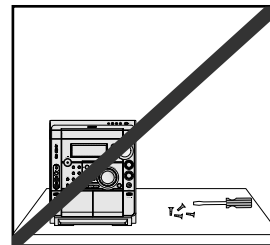

Do not remove any equipment panels. The inside of the unit contains live components, which cause electric shock.

Cleaning Your Mini-Compact System

To obtain the best possible results from your mini-compact system, you must clean the following elements regularly:

- ◆ The outer casing
- ◆ The compact disc player
- ◆ The cassette players (heads, rollers and drive capstans)
- ◆ Always unplug the system from the wall outlet:
 - ◆ Before cleaning it
 - ◆ If you are not going to be using it for a long time

Outer Casing

 
Clean the outer casing regularly using a soft cloth and a light detergent. Do not use abrasive powders, liquids or aerosol cleaners. Never let any liquids get into the system.

Compact Disc Player

- 1 Before playing a compact disc, clean it with a special CD cleaning agent. Do not use the same cleaning agents as for vinyl LP records. Carefully wipe the disc from the centre outward.
- 2 Regularly clean the player with a special cleaning disc (available from your local dealer).


Tape Decks

- 1 Press Push Eject() to open the cassette deck.
 - 2 Use a cotton bud and a special cassette cleaning agent to clean the:
 - ◆ Head (1)
 - ◆ Rollers (2)
 - ◆ Drive capstans (3)
- ◆ If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.
- ◆ Although your system is very hard-wearing, it should not be used in an excessively dusty environment or subjected to shocks or extreme heat (close to heating appliances or in direct sunlight, etc.).
- ◆ If the unit emits an unpleasant odor when in use, unplug it from the main supply and contact the after-sales service.

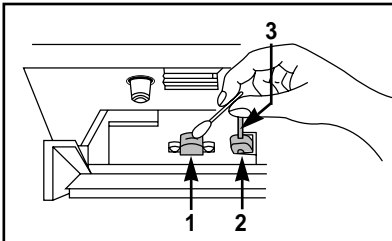

Precautions When Using Compact Discs

 - ◆ Handle your compact discs with care. Always hold them by the edges to avoid leaving fingerprints on the shiny surface.
- ◆ When you have finished playing a compact disc, always put it back in its case.
- ◆ Do not fix paper or adhesive tape to the discs and do not write on the label.
- ◆ Clean them with a special-purpose cloth.
- ◆ Store your compact discs in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Always use compact discs marked **DISC**.

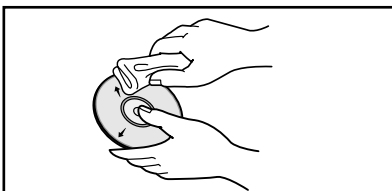

Precautions When Using Audio Cassettes

- ◆ Check that the tape in the cassette is sufficiently taught.
- ◆ To prevent erasing a cassette that you wish to keep, remove the safety tab on the upper edge of the cassette. To record a cassette, where the tab has been broken, simply cover the opening with adhesive tape.
- ◆ When you have finished playing a cassette, always put it back in its case.
- ◆ Store your cassettes in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Avoid using 120-minute cassettes as they place unnecessary strain on the tape mechanism.

Before Contacting the After-Sales Service

It always takes a little time to become familiar with a new appliance. If you have any of the problems listed below, try the solutions given. They may save you the time and inconvenience of an unnecessary service call.

	Problem	Checks/Explanation
G E N E R A L	The system does not work	<ul style="list-style-type: none"> • The main lead is not correctly plugged into a wall socket or the wall socket is not switched on. • The remote control batteries need replacing or the polarity has not been respected. • The On/Standby button has not been pressed.
	There is no sound	<ul style="list-style-type: none"> • The volume has been completely turned down. • The correct function (TUNER, CD, TAPE, AUX) has not been selected. • You have connected a set of earphones. • The loudspeaker wires have been disconnected. • The MUTE button has been pressed.
	The Timer does not work	<ul style="list-style-type: none"> • The timer has been stopped by pressing TIMER ON/OFF.
	System still doesn't work, even after following steps above.	<ul style="list-style-type: none"> • Press the 3D SOUND button for 5 seconds in power 'OFF'(standby), the system is returned the original position (RESET)
C D	The compact disc player does not start playing	<ul style="list-style-type: none"> • The CD function has not been selected. • The disc has been inserted face down or is either dirty or scratched. • The laser sensor is dirty or dusty. • The system has not been installed on a flat, horizontal surface. • Condensation has formed in the player; leave the system in a warm, airy room for at least one hour.
C A S S E T T E S	The tape does not start playing	<ul style="list-style-type: none"> • The TAPE function has not been selected. • The cassette has not been inserted correctly. • The cassette player has not been closed. • The tape is either slack or broken.
	The volume falls off	<ul style="list-style-type: none"> • The audio heads are dirty. • The rollers or drive capstans are dirty. • The tape is worn.
R A D I O	The cassette is not erased correctly	<ul style="list-style-type: none"> • The TUNER function has not been selected.
	There is excessive wow and flutter	<ul style="list-style-type: none"> • The radio frequency has not been correctly selected.
	Reception is poor or no radio stations are received at all	<ul style="list-style-type: none"> • The aerial has been disconnected or is not facing the right way. Turn it until you find the best orientation. • You are in a building that blocks radio waves; you must use an outside aerial.

If the above guidelines do not allow you to solve the problem, take a note of:

- ◆ The model and serial numbers, normally printed on the rear of the system
- ◆ Your warranty details
- ◆ A clear description of the problem

Then contact your local dealer or SAMSUNG after-sales service.

Technical Specifications



SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

RADIO

LW (option)

Usable sensitivity	60 dB
--------------------	-------

SW (option)

Usable sensitivity	40 dB
--------------------	-------

AM (MW)

Signal/noise ratio	40 dB
--------------------	-------

Usable sensitivity	54 dB
--------------------	-------

Total harmonic distortion	2 %
---------------------------	-----

FM

Signal/noise ratio	50 dB
--------------------	-------

Usable sensitivity	10 dB
--------------------	-------

Total harmonic distortion	0.5 %
---------------------------	-------

COMPACT DISC PLAYER

Capacity	3 discs
----------	---------

Frequency range	20 Hz - 20 KHz (± 1 dB)
-----------------	------------------------------

Signal/noise ratio	90 dB (at 1 KHz) with filter
--------------------	------------------------------

Distortion	0.05 % (at 1 KHz)
------------	-------------------

Channel separation	80 dB
--------------------	-------

Disc sizes	Diameter: 120 or 80 mm. Thickness: 1.2 mm
------------	---

TAPE DECK

Frequency range	125 Hz ~ 8 KHz
-----------------	----------------

Signal/noise ratio	40 dB
--------------------	-------

Channel separation	30 dB
--------------------	-------

Erasing effect	45 dB
----------------	-------

AMPLIFIER

Output power (6 Ω)	70W/CH RMS (total harmonic distortion: 10 %)
----------------------------	--






Channel separation	45 dB
--------------------	-------

Signal/noise ratio	75 dB
--------------------	-------

GENERAL

Dimensions	270 (W) x 320 (H) x 340 (D) mm
------------	--------------------------------

Note on Terminology

ANGLE	Recorded onto some DVD discs are scenes which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left, from the right, etc.). With such discs, the Angle button can be used to change the angle of view for specific scenes.
CHAPTER NUMBER	These numbers are recorded on DVD discs. A Title is subdivided into many sections, each of which is numbered, and specific parts of the video can be searched quickly using these numbers.
DVD	A high-density optical disc on which high-quality pictures and sound have been recorded by means of digital signals. Incorporating a new video compression technology (MPEG-2) and high-density recording technology, a DVD disc comprises two 0.6 mm thick discs bonded together.
PCM	An acronym for Pulse Code Modulation - another name for digital audio.
PBC (PLAYBACK CONTROL)	This is recorded on a video CD (version 2.0). Selected scenes or information can be chosen from the menu displayed on the TV monitor.
REGION NUMBER	Both the DVD player and DVD discs are encoded with a region number. If the region number on the DVD disc does not correspond to the region number of the DVD player, the player cannot play the disc.
SUBTITLES	Translated appearing at the bottom of the screen. A DVD disc can contain up to 32 subtitle languages.
TITLE NUMBER	These numbers are recorded on DVD discs. When a disc contains two or more movies, these movies are numbered as Title 1, Title 2, etc.
TRACK NUMBER	These numbers are assigned to the tracks which are recorded on video and audio CDs. They enable specific tracks to be located quickly.
VIDEO CD	Contains recordings of pictures and sound whose quality is roughly comparable to that of video tape. This player also supports video CDs with playback control (version 2.0).
	You can enjoy 5.1 (or 6) channels of high fidelity digital sound from various digital input sources such as laser discs, DVD, CD etc. DTS provides a realistic, clear surround sound that has not previously been available from conventional surround sound.
	5.1 (or 6) Channel Digital Surround sound reproduced from DVDs and LDs recorded as a digital signals (with  disc marking). With better sound quality, dynamic range, and directionality than the traditional Dolby surround technology, you can enjoy the dynamic realistic sound.
 PRO LOGIC	A 4 channel analog sound reproduced from a program source such as a video-tape or LD with the  PRO LOGIC mark. You can enjoy a more realistic, robust sound unavailable from regular stereo sources.

THIS APPLIANCE IS MANUFACTURED BY:

